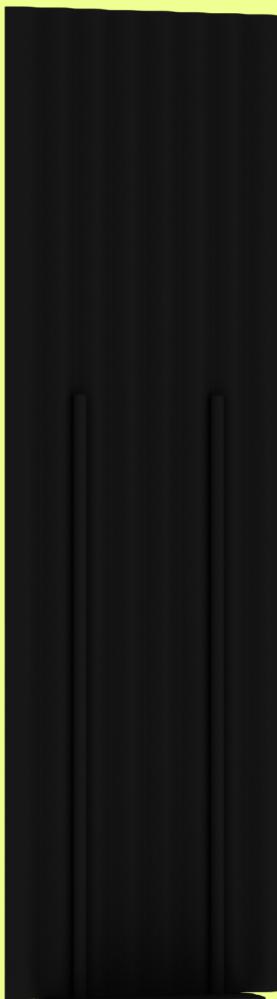


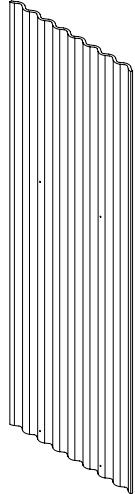


DeVorm

Mute Flow Room Divider

Installation guide



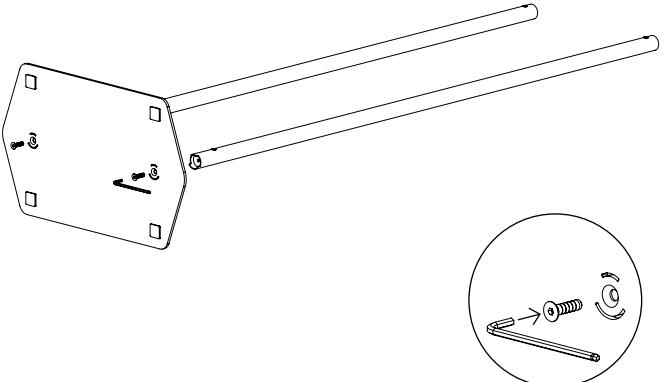
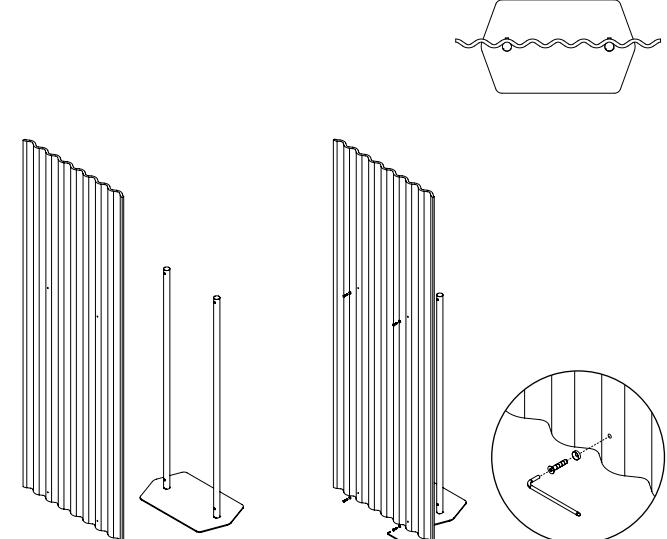
Parts required

Mute Panel 1x	Tube 2x	Base 1x	Felt glider 30x30mm 4x
			
Allen bolt M8x25 2x	Allen bolt M6x30 4x	Countersunk washer M6 4x	
			

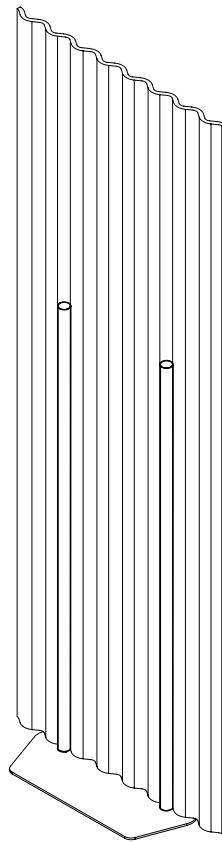
Tools required

Allen key BZK4	Allen key BZK5
	

Installation

<p>1 Fit both tubes into the base and bolt it tight with the M8x25 allen bolt. Place the felt gliders on the bottom of the base (4x). Make sure that the M8x25 allen bolt is sunk into the base.</p> 	<p>2 Attach the Mute panel to the stand with 4x M6x30 allen bolt and 4x countersunk washer. Make sure the Mute panel is placed correct. Place the Mute panel correctly around the two tubes.</p> 
--	---

3 You are all set!



Find us at

A Dijkgraaf 38
6921 RL Duiven
The Netherlands

Get in touch

T +31 (0) 26 820 03 60
E sales@devorm.nl
W www.devorm.nl

Stay up to date

IG @de_vorm
LI /company/de-vorm
PIN /devorm_interiorproducts