


DeVorm

AK 2 Workplace Divider Lamp Standing

Installation guide

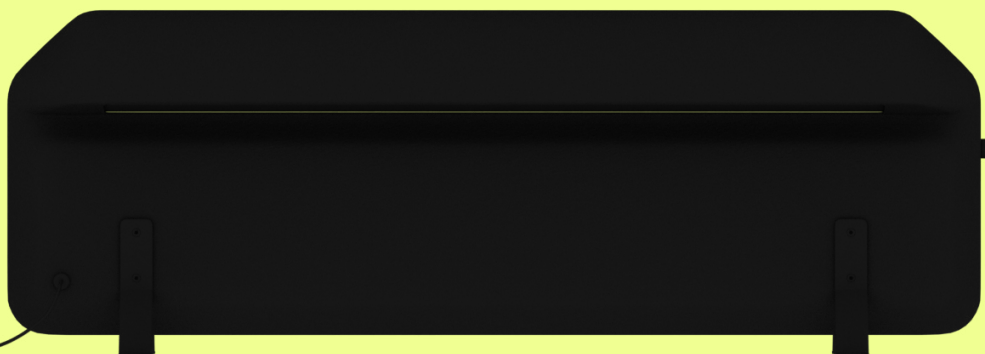


Introduction

- Follow the instructions for a safe installation.
- Make sure that the power supply has been turned off before installing or cleaning the product.
- Pay attention to the correct colors when connecting the wires: blue (N), brown or black (L) and protection class I yellow-green (earth wire).
- Maintain interior lighting with a dry cloth or brush. Do not use alcohol or any other solvents to clean the product. Keep all electrical components dry. **Make sure the power is switched off before cleaning this product.**
- If the fixture is mounted on a metal surface, it must be earthed or connected to earthing from the electrical installation.



The lighting fixture has been designed, produced and tested according to European safety regulations (EN-60598 / CE). All used components are UL-registered. Changes in design and technical specifications reserved.

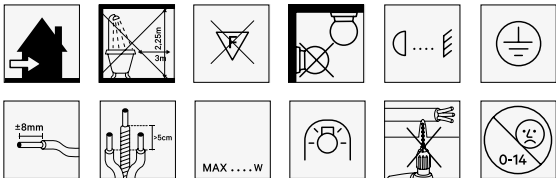

Design

De Vorm

About

A Workplace Divider Lamp for reading tables, shared work spaces and open offices. The large shape has its own characteristic aesthetic as well as sound dampening properties to increase the sensation of privacy.

Care & Maintenance

Make sure that the power has been turned off before cleaning this product. It is advised to clean by dabbing the PET Felt with a damp cloth. Do not rub, it can cause damage and may cause bald spots. If this is not sufficient, stubborn stains can be removed with qualitative cleaning products like the James cleaning set.





Technical data

Voltage	220-240V
Frequency	50 - 60 Hz
IP rating	IP20
Socket	2 x G13 Philips CorePro LED tube
Power	14.5W
Light output	1600 Lm
Temperature	4000K
CRI	80


Note

Connect the LEDtube side, marked with logo, to the power source of the AK 2 (feed side).

Parts required

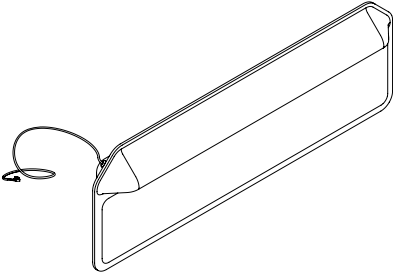
Assembled AK 2 including electrical cord 1x	Legs + cork gliders 4x	Spacer 4x	Screws M6x16 mm 8x
			

Tools required


Allen key BZK3


Installation


- 1 Make sure the power is switched off.
- 2 Press the spaces in the perforations of the AK 2.

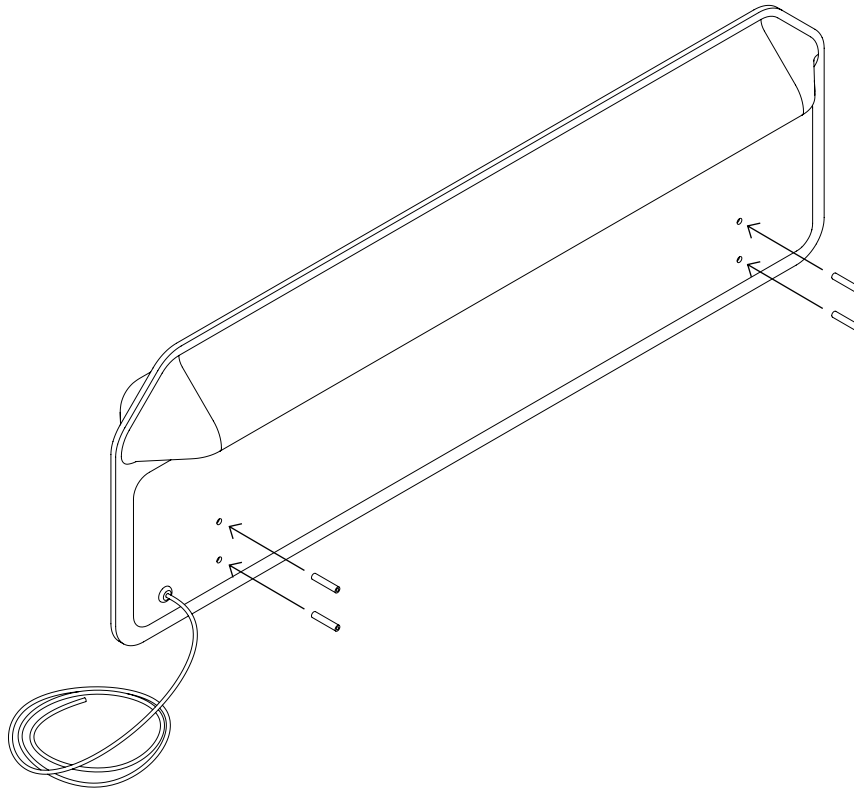


- 3 Assemble the legs onto the spacers in the AK 2.

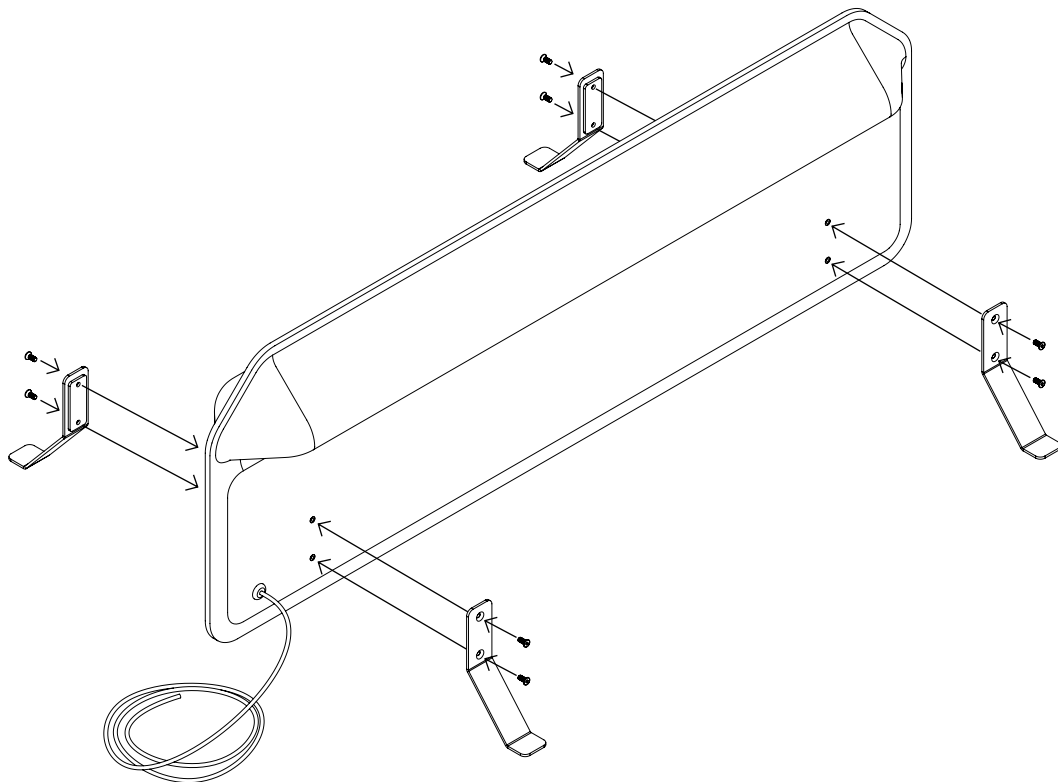

4 Tighten the screws on both sides. Use two identical allen keys.

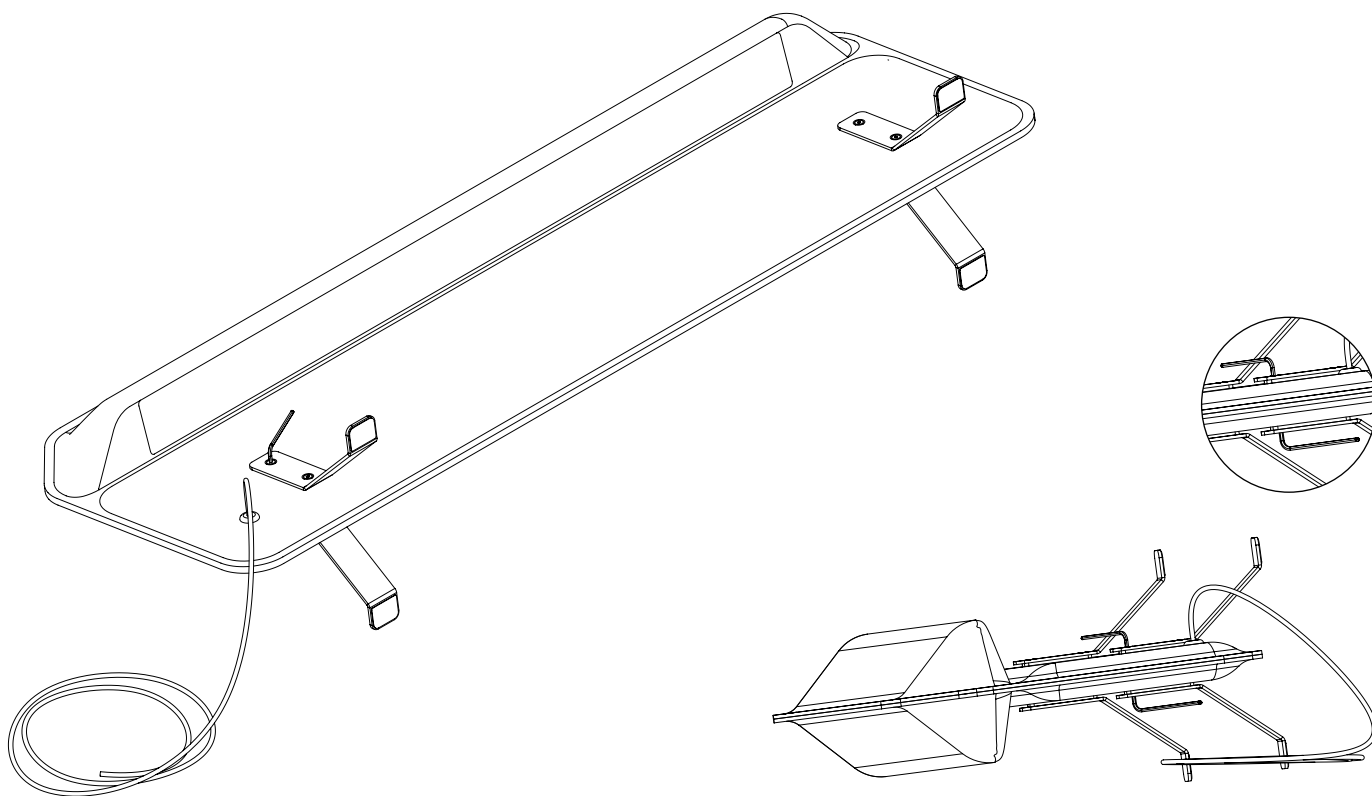

5 Connect to power supply — and you're done!

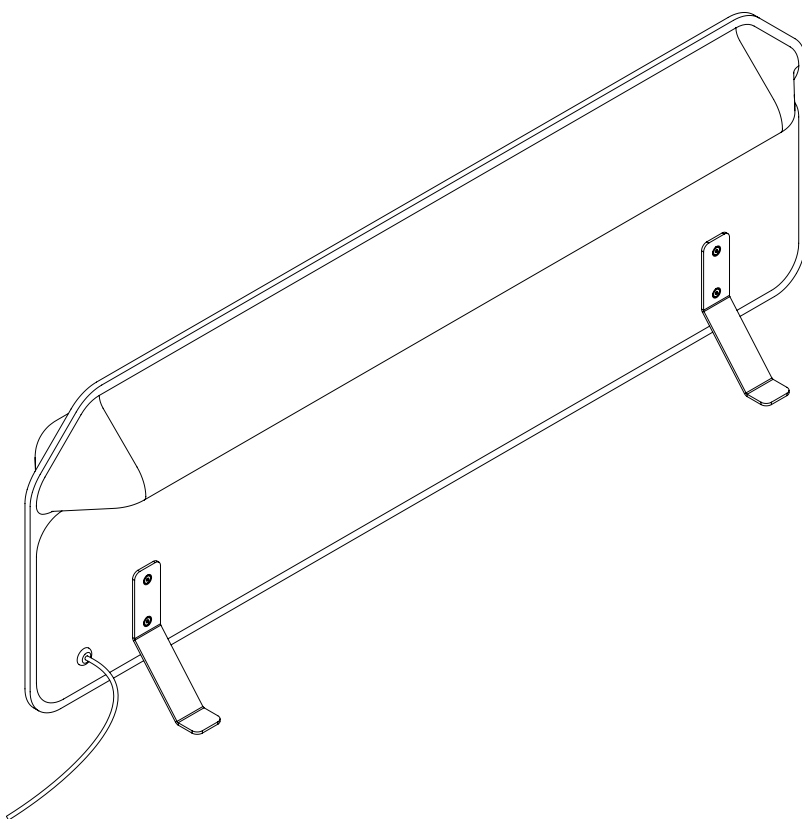

Find us at
A Dijkgraaf 38
6921 RL Duiven
The Netherlands

Get in touch
T +31 (0) 26 820 03 60
E sales@devorm.nl
W www.devorm.nl

Stay up to date
IG [@de_vorm](https://www.instagram.com/de_vorm)
LI [/company/de-vorm](https://www.linkedin.com/company/de-vorm)
PIN [/devorm_interiorproducts](https://www.pinterest.com/devorm_interiorproducts)