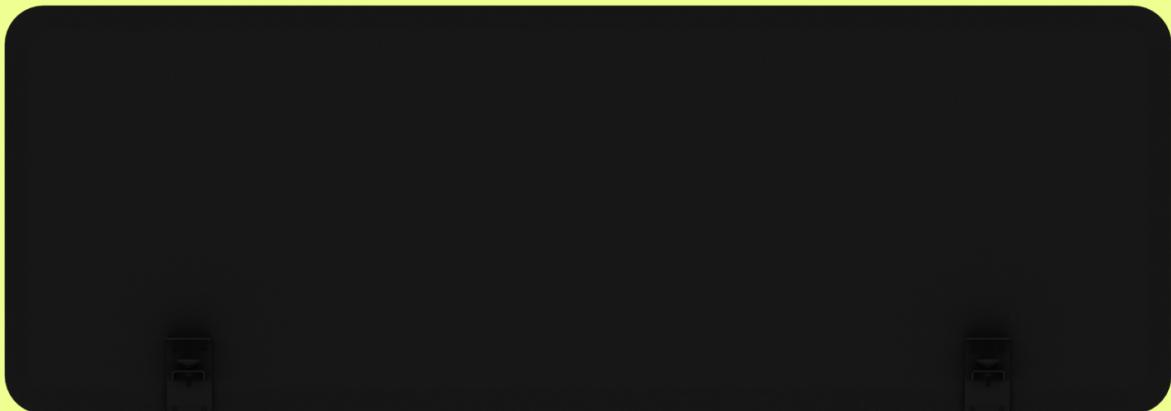


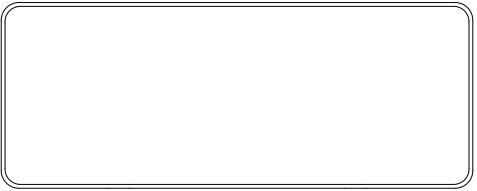
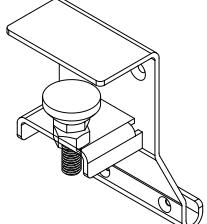
DeVorm

AK 3 + 4
Desk Clamp


Installation guide



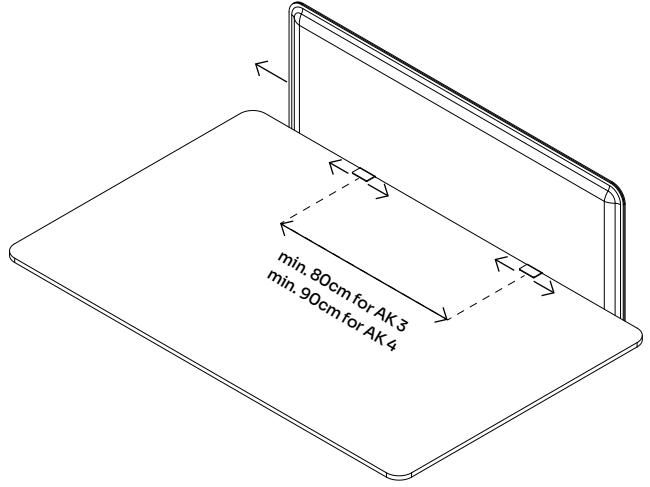
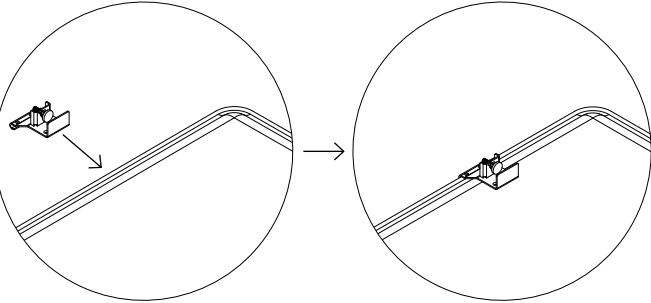
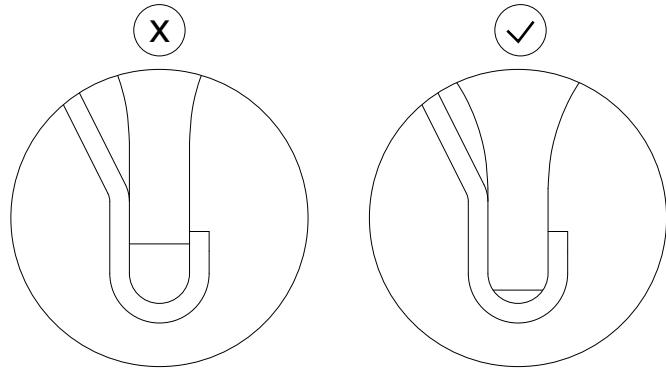
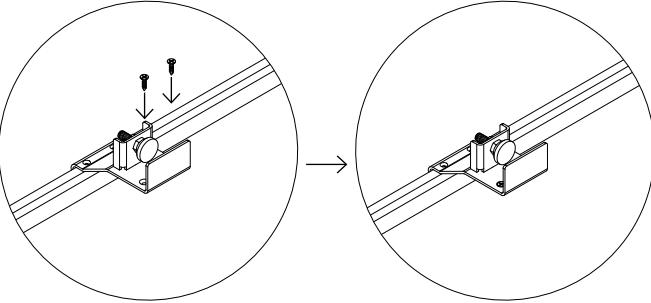
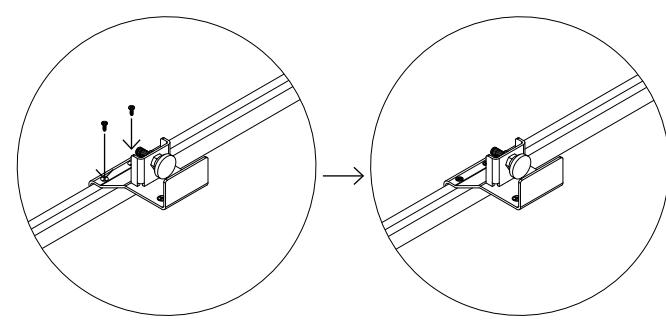
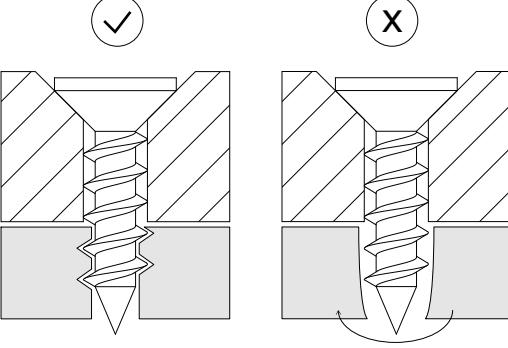
Parts required

AK 3 / AK 4 Panel	Clamp (including adjustable foot) 2x	Screw 5x20 4x	Screw 3,5x12 4x
			

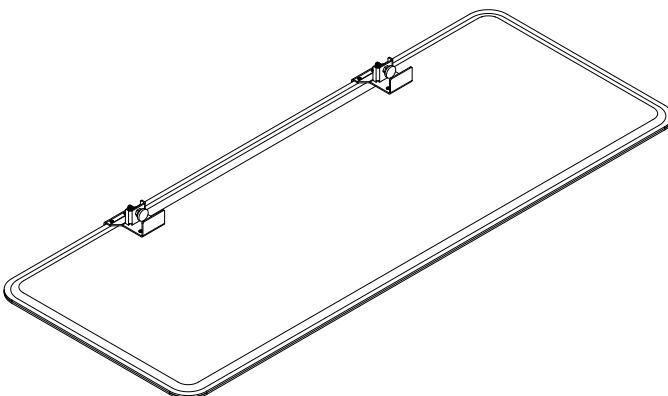
Tools required

Crosshead screwdriver	Hex key (5 mm)	Wrench (17mm)
		

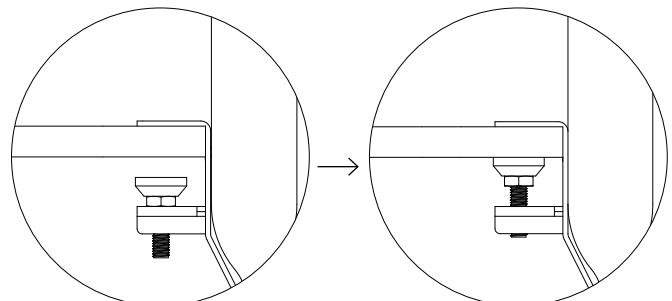
Installation

<p>1 Determine where the panel and clamps should be installed, taking into account the minimum required distance between the clamps.</p>	<p>2 Put the hook of the clamp around the underside of the panel.</p>
	
<p>3 Make sure that the panel has been sunk sufficiently into the hook of the clamp.</p>	<p>4 Insert the screws (5x20) into the upper holes of the clamp and screw them into the panel.</p>
	
<p>5 Insert the screws (3,5x13) into the lower holes of the clamp and screw them into the panel.</p>	<p>IMPORTANT! Stop turning the screw once the head of the screw has reached the metal.</p>
	

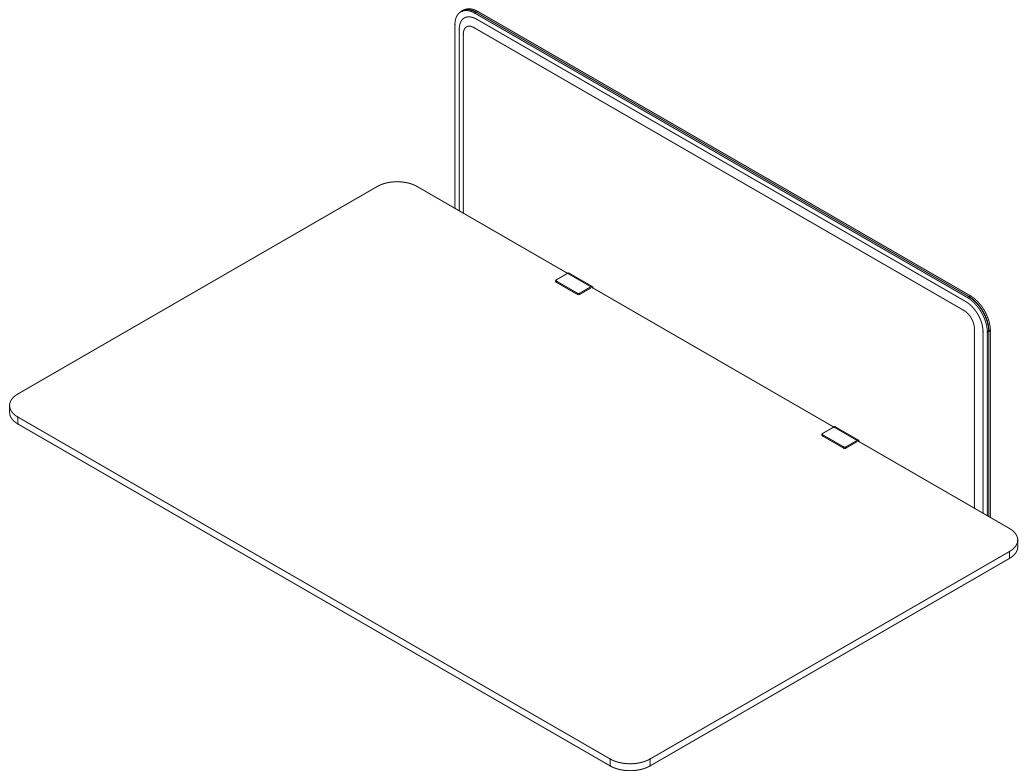
6 Perform steps 2 - 5 for both clamps.



7 Mount the panel onto the tabletop and fix it using the adjustable feet (you can use a wrench or a hex key).



8 You are all set!



Find us at

A Dijkgraaf 38
6921 RL Duiven
The Netherlands

Get in touch

T +31 (0) 26 820 03 60
E sales@devorm.nl
W www.devorm.nl

Stay up to date

IG @de_vorm
LI /company/de-vorm
PIN /devorm_interiorproducts