




DeVorm

AK 3 + 4 Workplace Divider Standing

Installation guide

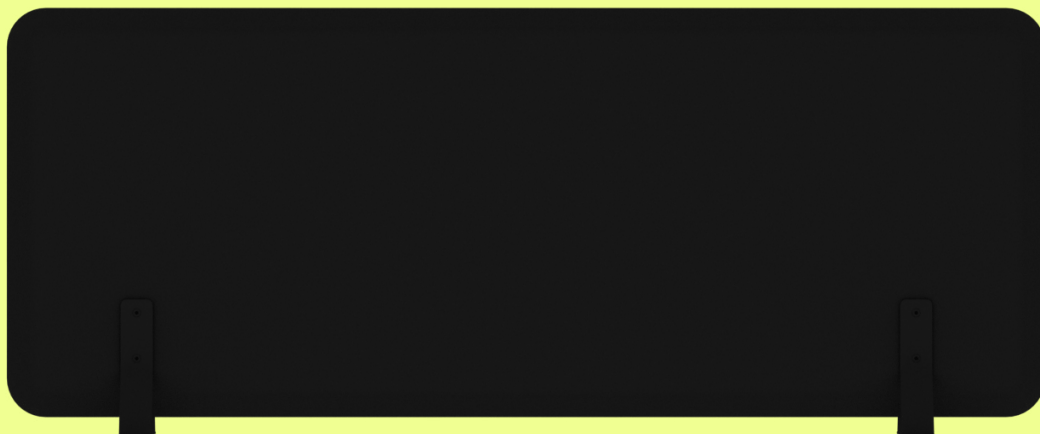

Parts required

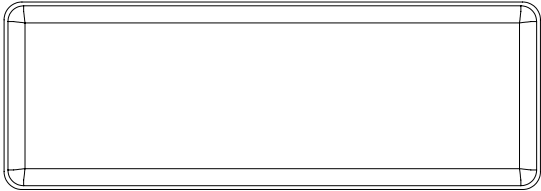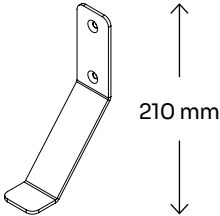
AK 3 / AK 4 Panel	Screws M6x16 mm 8x	Legs + cork gliders 4x
		

Tools required


Allen key BZK3 2x


Installation


1 Assemble the legs onto the spacers in the panel.

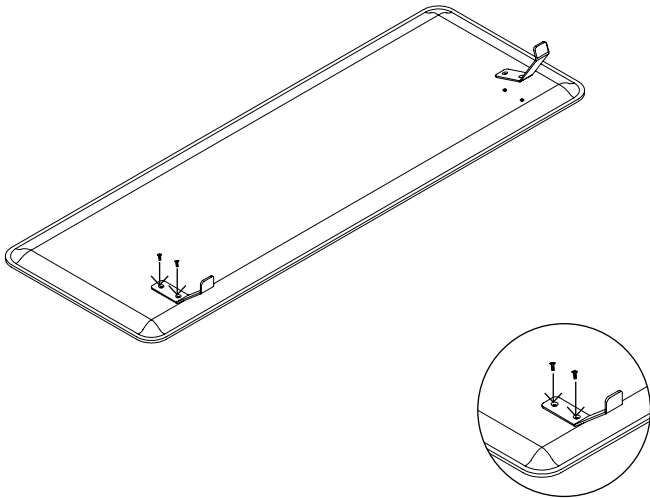


2 Repeat on the other side.

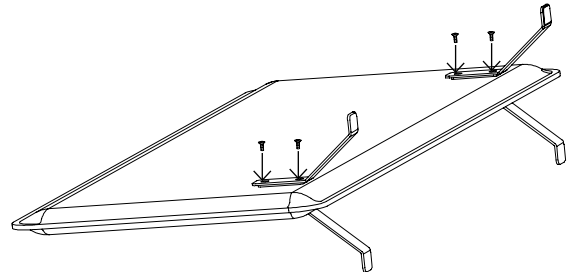

3 Tighten the screws on both sides. Use two identical allen keys.

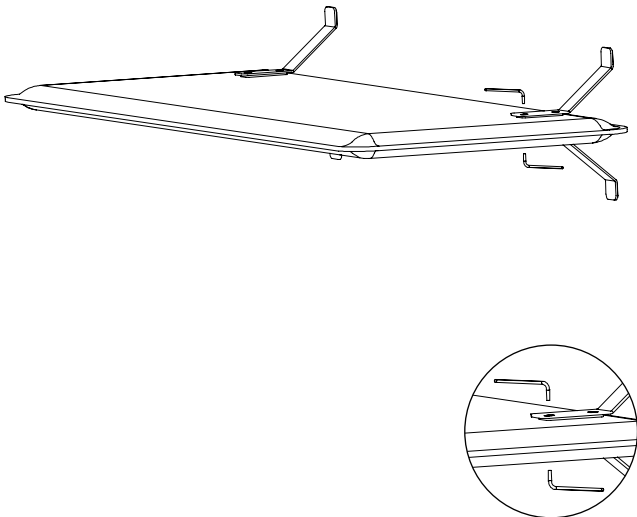

4 The assembly of the AK 3/4 Room Divider Standing is done!

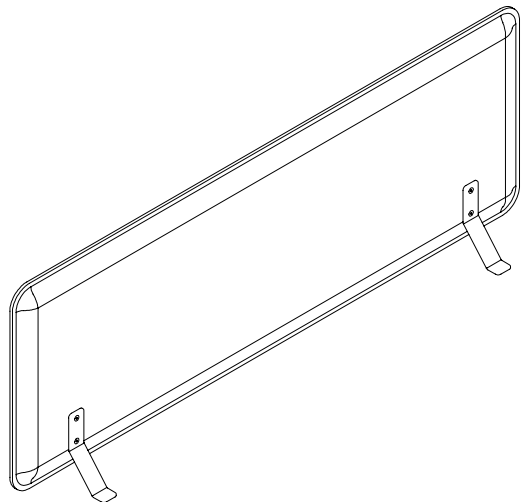

Find us at
A Dijkgraaf 38
6921 RL Duiven
The Netherlands

Get in touch
T +31 (0) 26 820 03 60
E sales@devorm.nl
W www.devorm.nl

Stay up to date
IG [@de_vorm](https://www.instagram.com/de_vorm)
LI [/company/de-vorm](https://www.linkedin.com/company/de-vorm)
PIN [/devorm_interiorproducts](https://www.pinterest.com/devorm_interiorproducts)