


DeVorm

Mute Beam Indirect

Installation guide

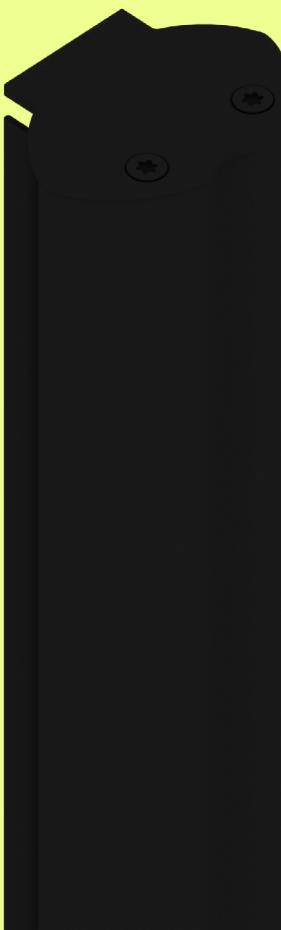


Introduction

- Follow the instructions for a safe installation.
- Make sure that the power supply has been turned off before installing or cleaning the product.
- Maintain interior lighting with a dry cloth or brush. Do not use alcohol or any other solvents to clean the product. Keep all electrical components dry. Make sure the power is switched off before cleaning this product.



Driver power connection

- 5 Pole wire - DALI dimming

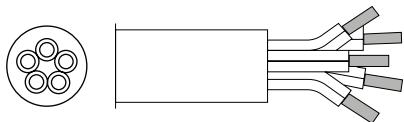

Brown	L
Blue	N
Yellow/green	Ground
Red	Dali+
White	Dali-

Design

De Vorm



About

Mute Beam Indirect creates soft, atmospheric lighting that reflects beautifully off surrounding surfaces. This sleek LED fixture delivers a diffused glow to enhance your commercial spaces with clean, glare-free illumination. Built from recycled aluminium with DALI dimming capability and available in 12 RAL colours, it measures 239 cm to align perfectly with Mute PET Felt Acoustic Panels or work as a standalone lighting solution.




Specifications

LED module	COB LED strips
Voltage	LED: 24V Driver: 220V-240V
Power	Max. 10 w/m
Colour temperature	3000K
CRI	>80
Operating temperature	-20° - +50°
LED driver	Included
IP rating	IP20
Dimmable	yes, DALI
Lumen output max	To be confirmed
Lumen output setted	To be confirmed

Parts required

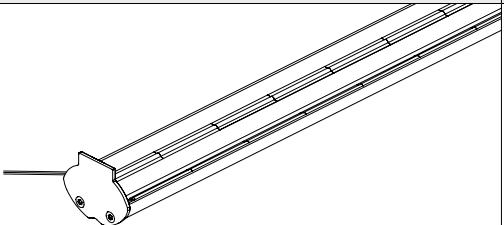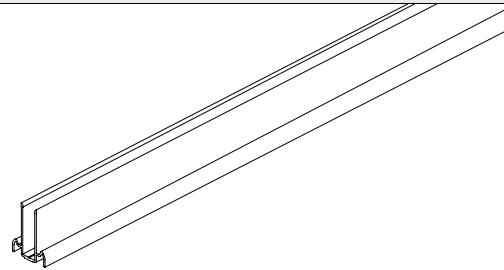LED profile incl cable 1x	Wall profile 1x	Driver 60W 1x
		

Tools required

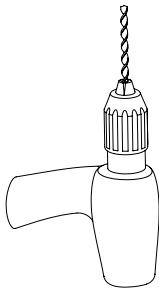
Drill	Flathead screwdriver	Level
		

Not included


Screws
Wall plugs

Preparation


- 1 Check the wall and determine which fixings you need for your walltype.

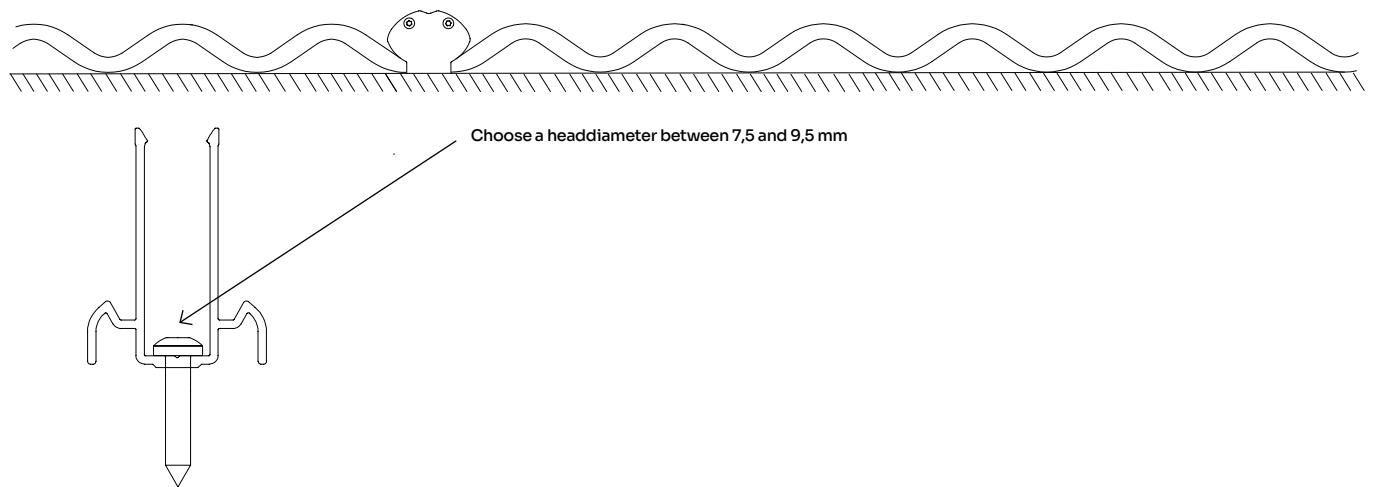



- 2 Drill several holes in the wall profile, using the V-groove in the middle as a guide to stay centred.

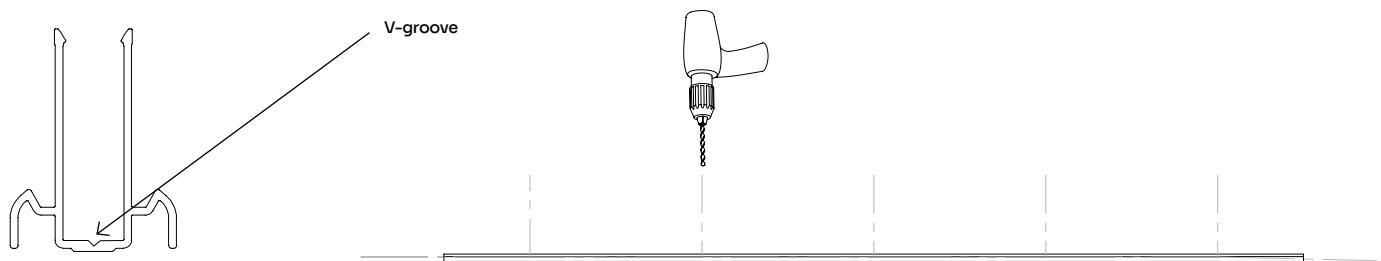


3 Secure the wall profile to the wall with the top screw. Use a spirit level to position the wall profile so it is perfectly level.

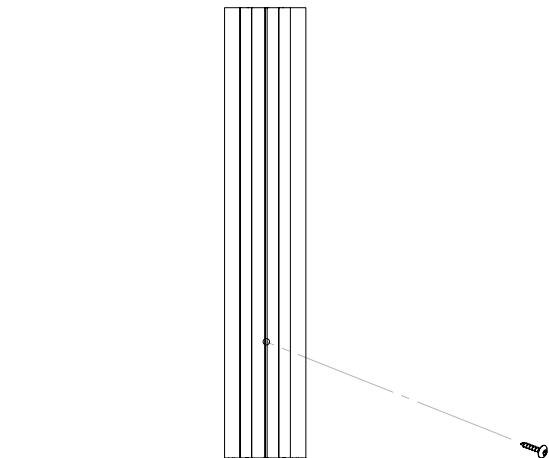

4 Once the profile is level, fasten the remaining screws.

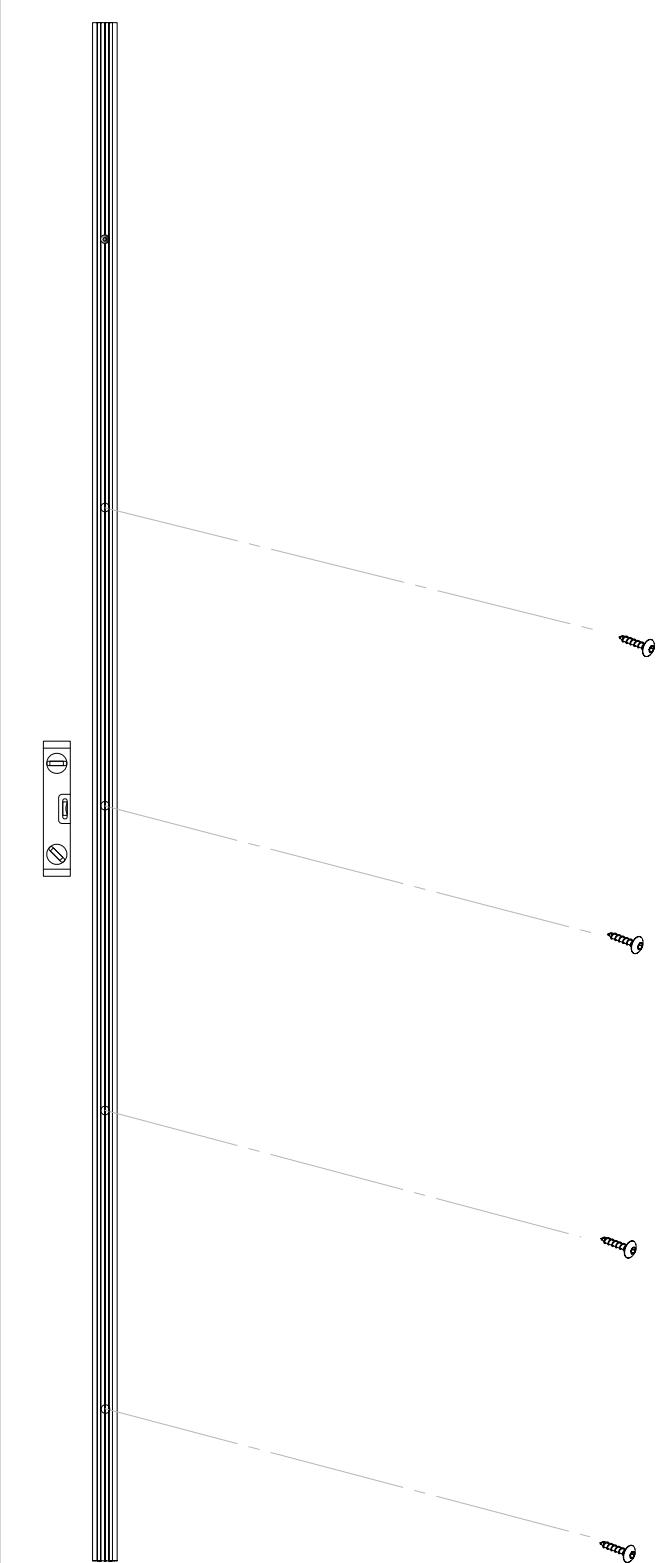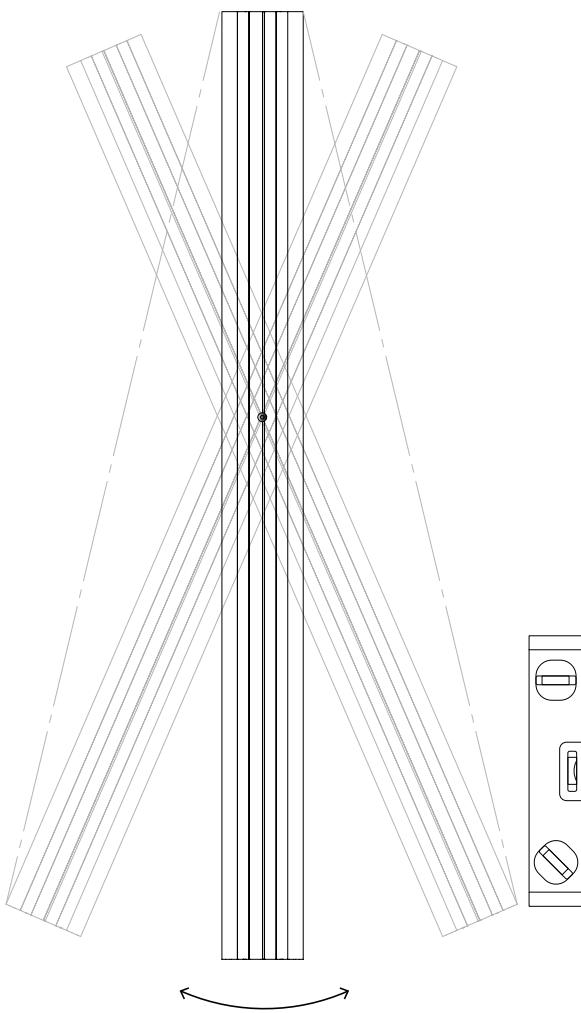


5 Decide if you'd prefer your driver at the top or at the bottom of the Mute Beam.

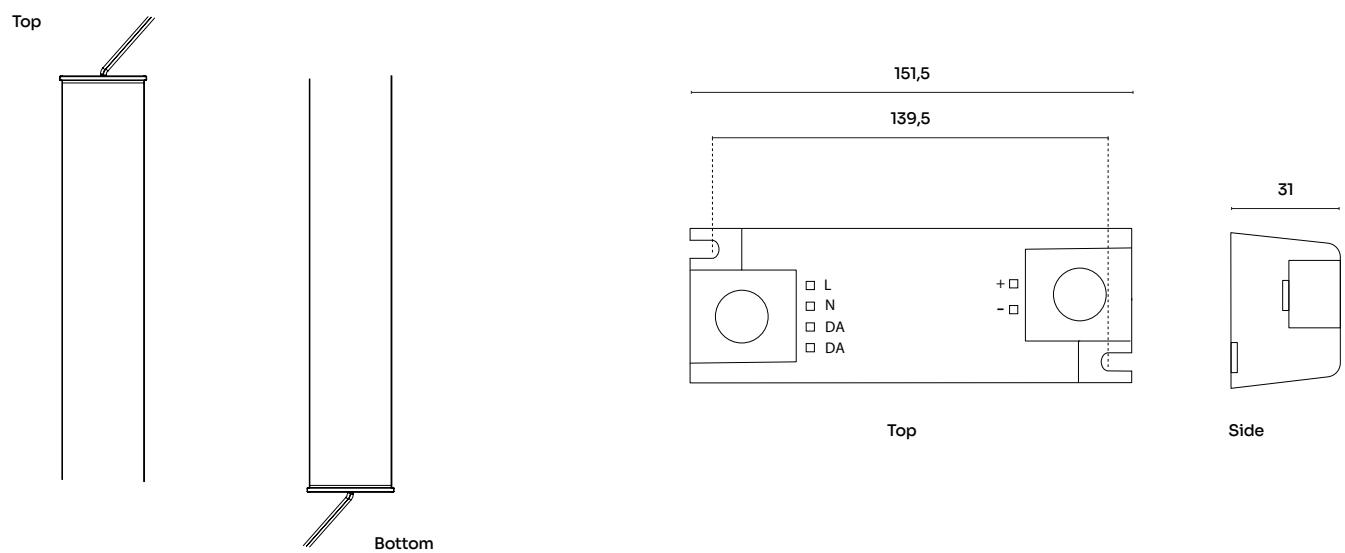

6 - Place the LED profile on one side inside the wall profile


- Begin installation from one end
- Press firmly until the LED profile clicks

- Press along the entire lenght until it securely clicks into place and is completely fixed in the wall profile.


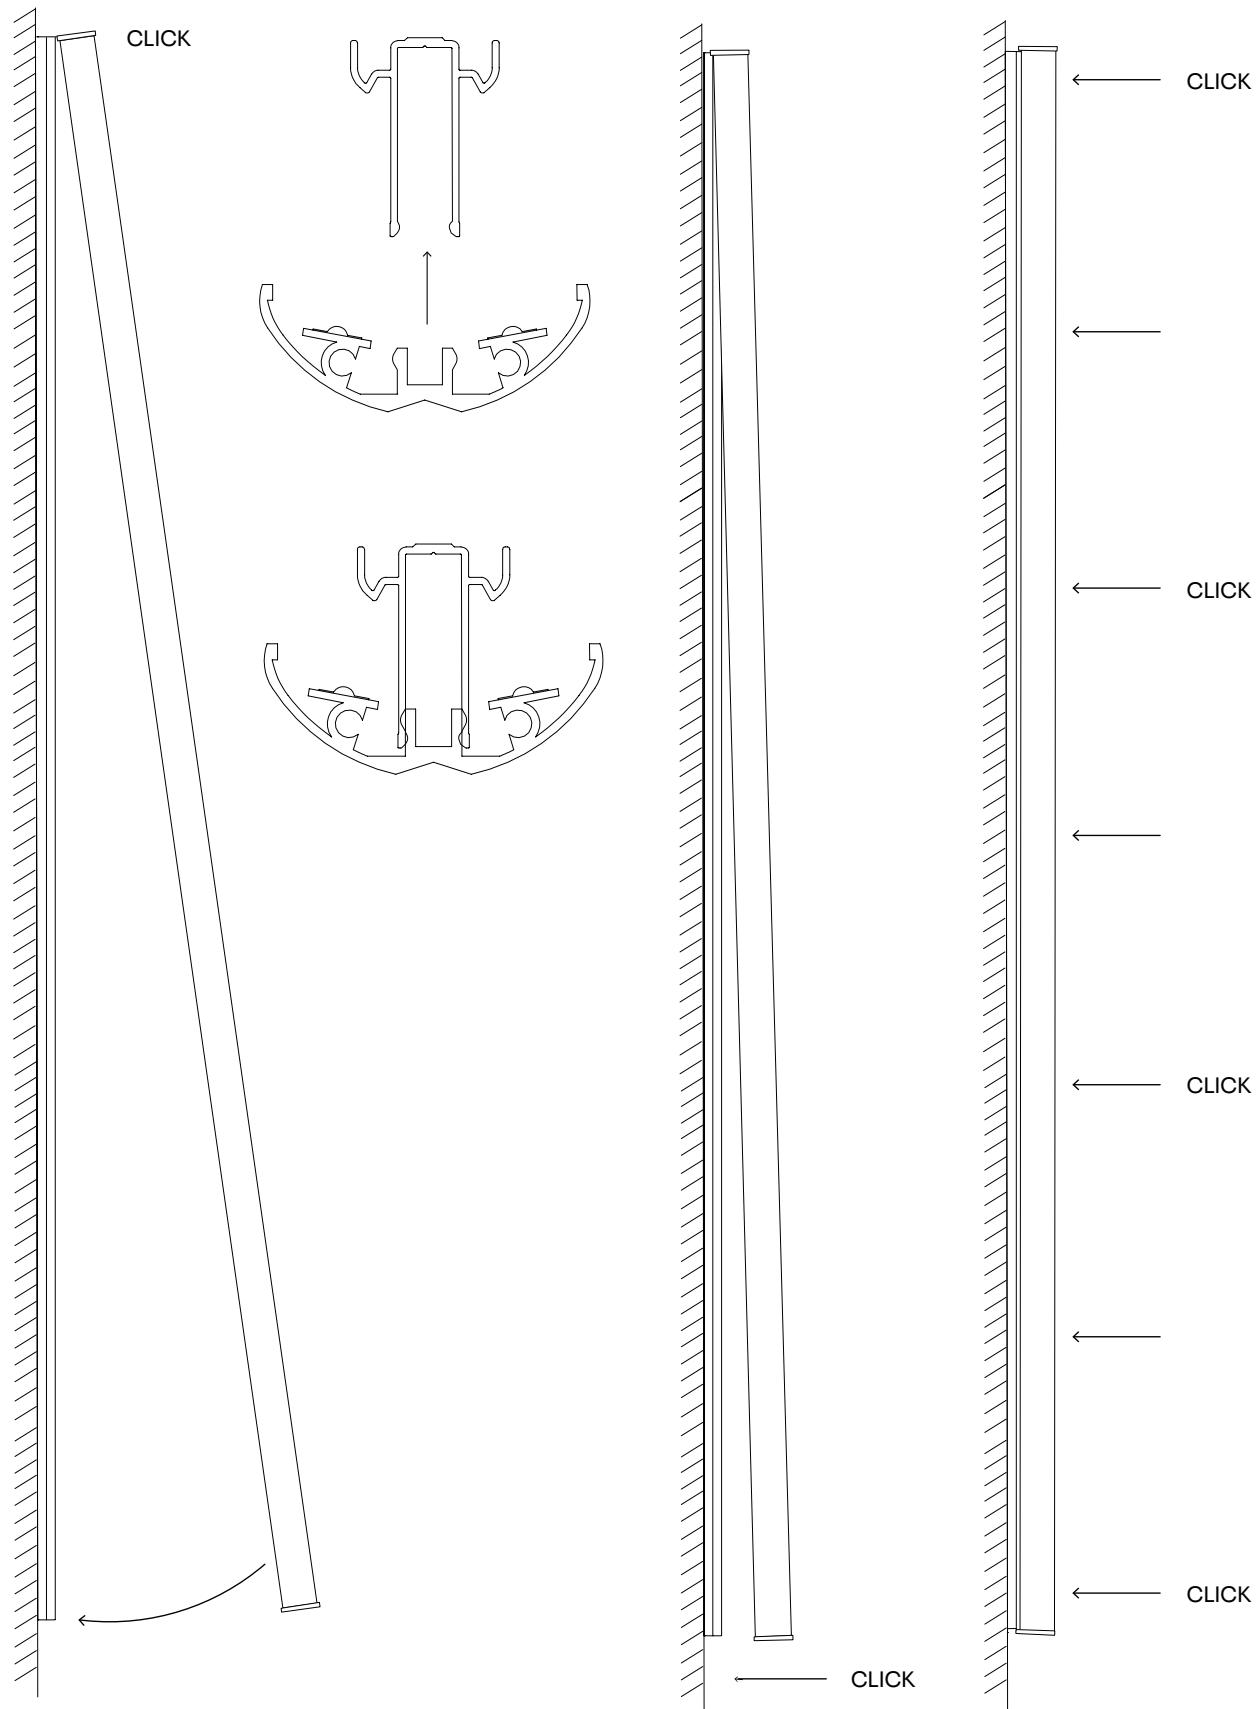


Connect the driver

8 - Make sure the power is switched off.
- Check the manual of the driver for specifics
- Use a flathead screwdriver to loosen the caps

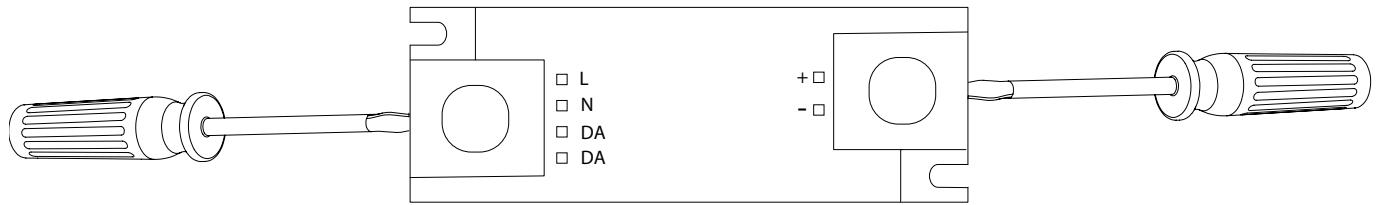


9 Connect the LED cables by pushing a small flathead screwdriver into the push-in terminals.

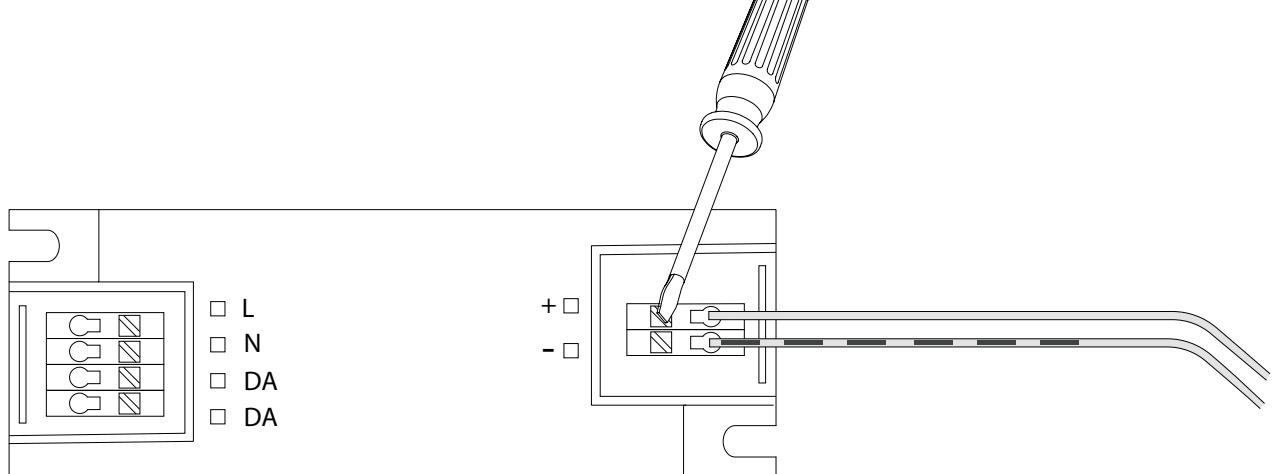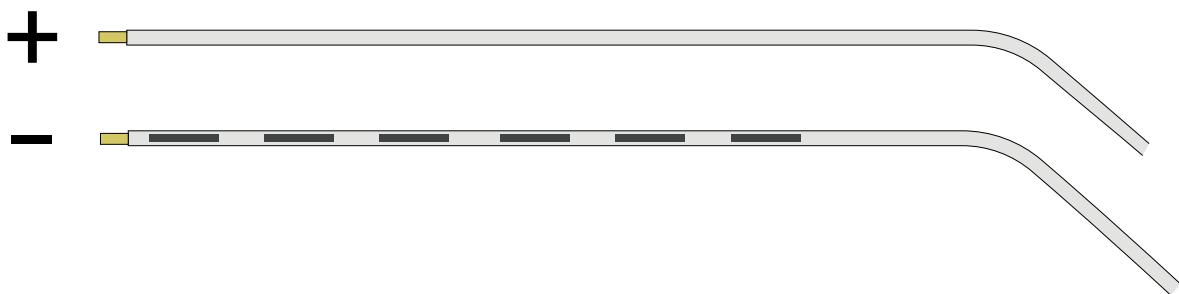


Connect the driver

10 Connect the powercables by pushing a small flathead screwdriver into the push-in terminals.


Excluding DALI

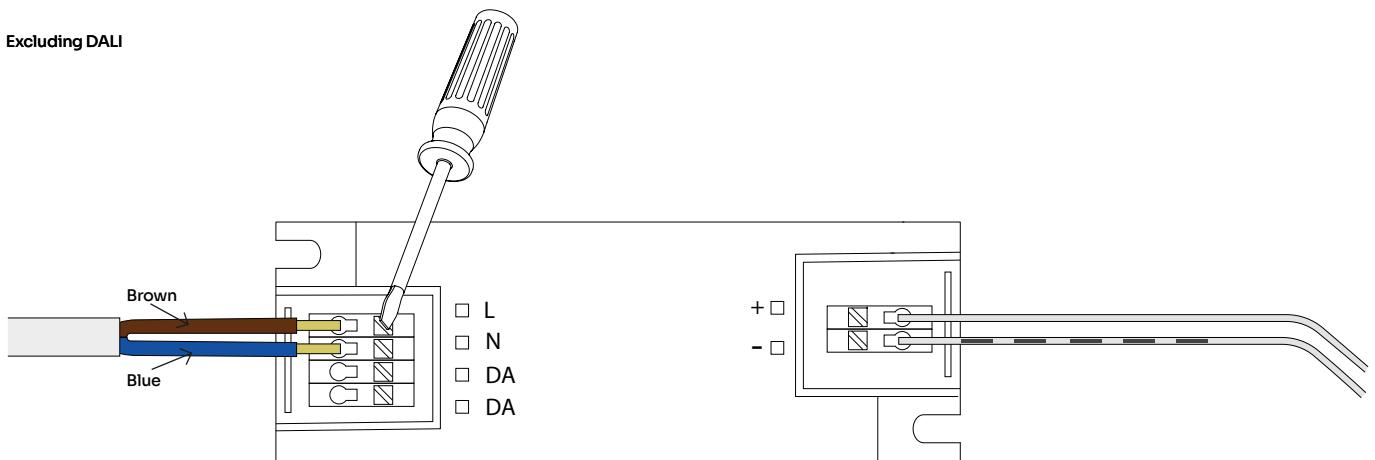

Including DALI

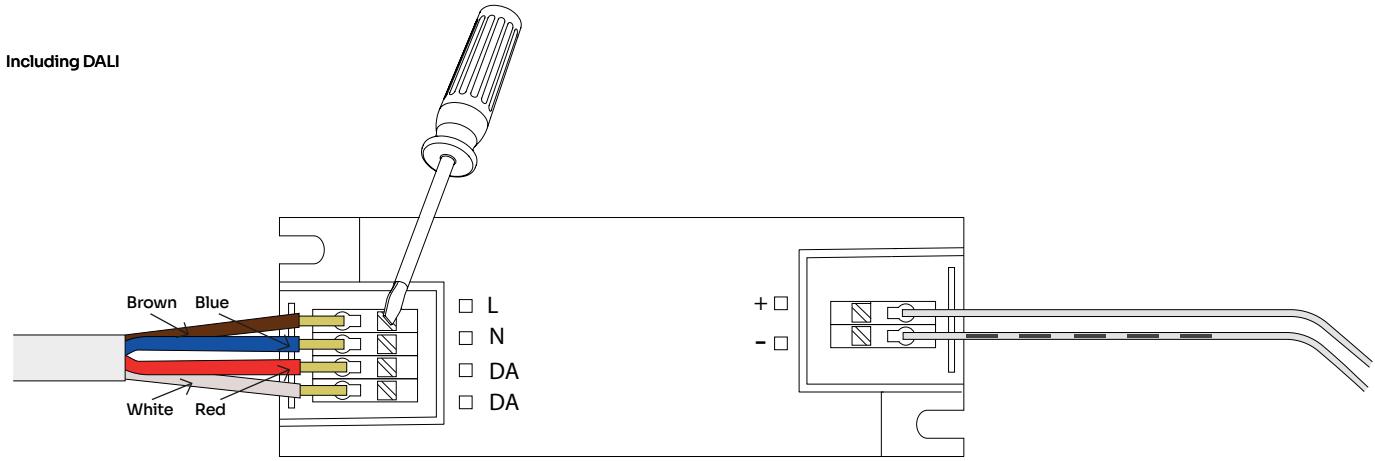


11 Put the caps back on the driver.

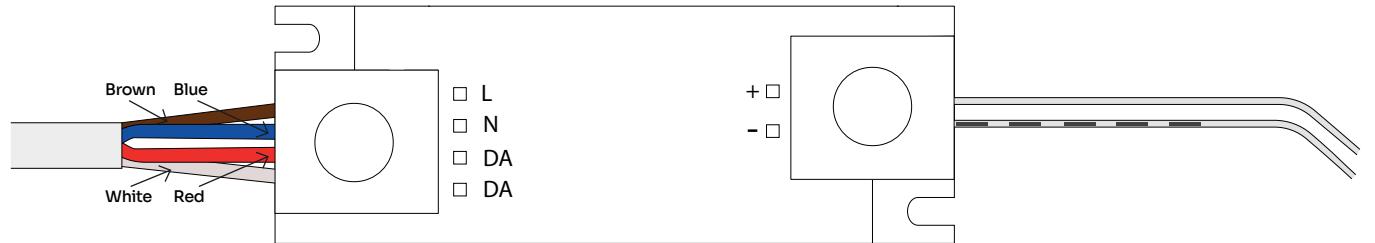

Connect the driver

12 Mount the driver to an invisible spot.

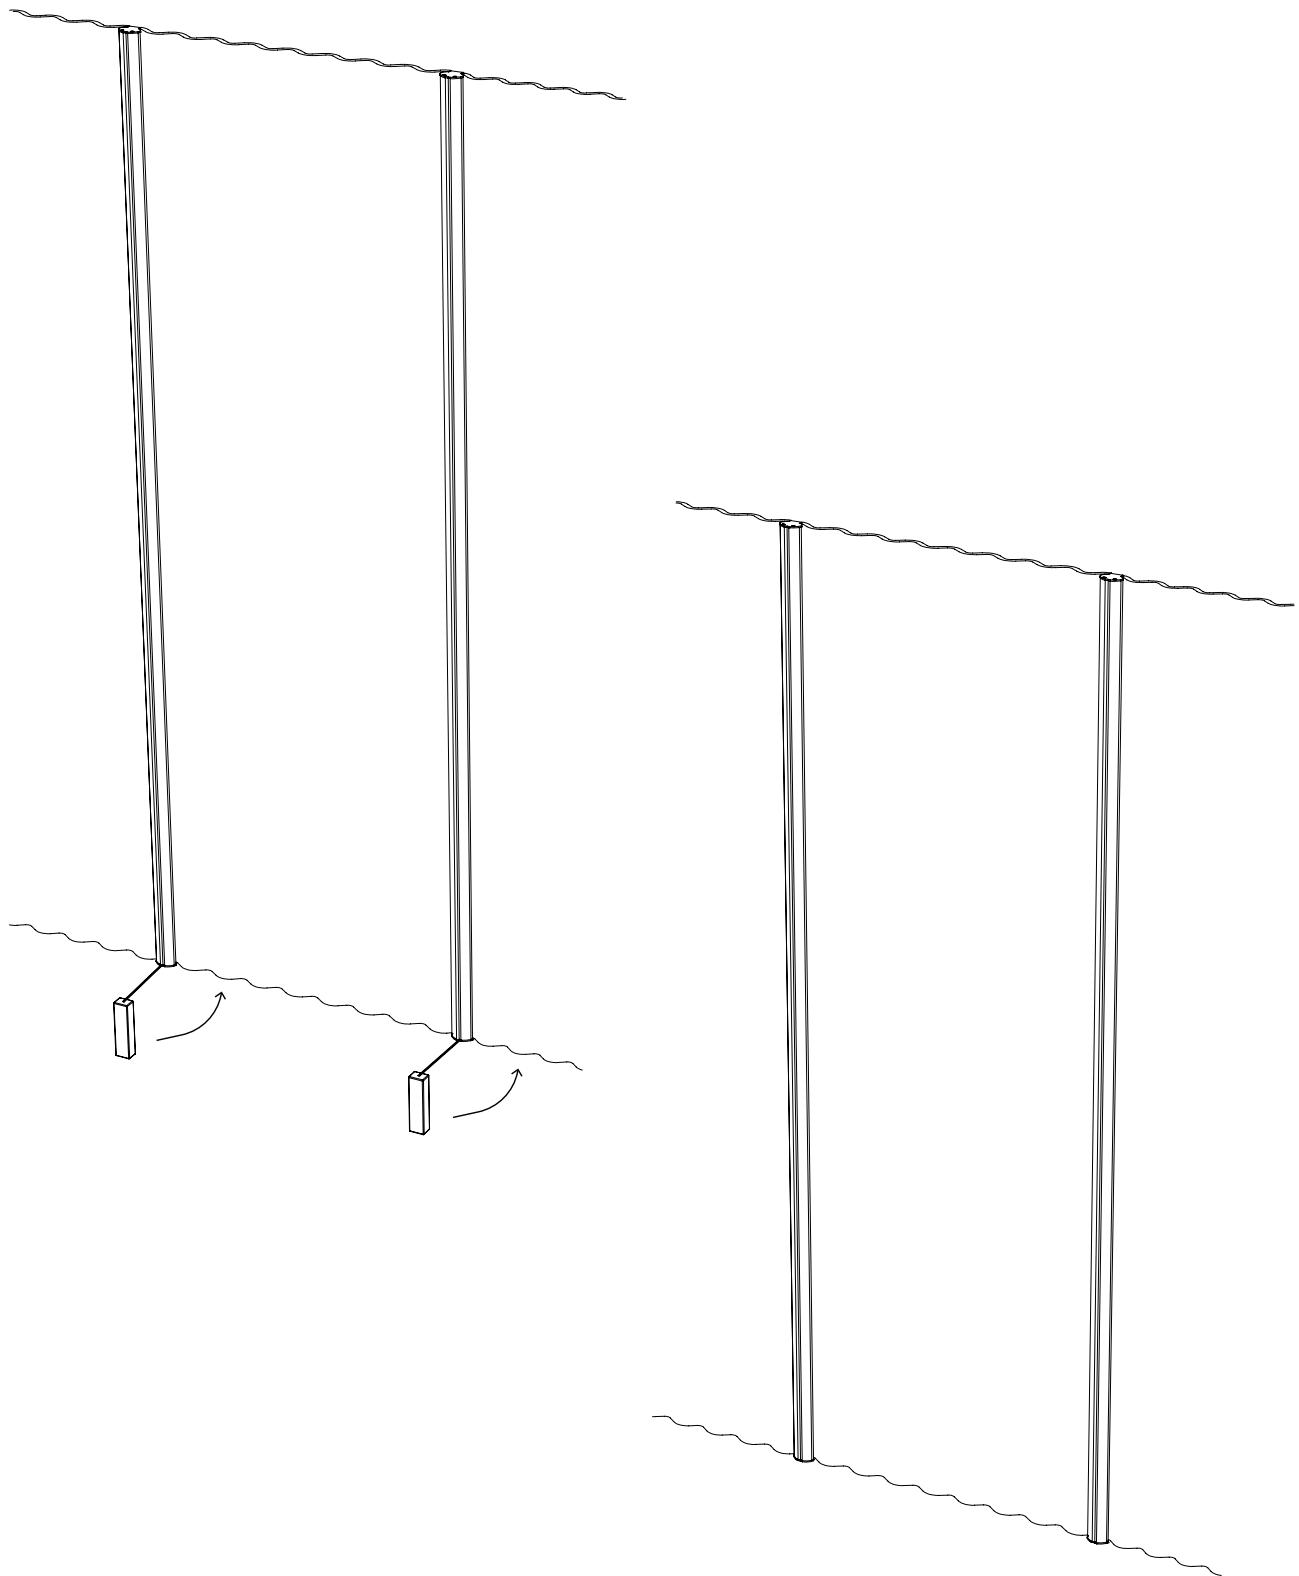

Find us at

A Dijkgraaf 38
6921 RL Duiven
The Netherlands

Get in touch

T +31 (0) 26 820 03 60
E sales@devorm.nl
W www.devorm.nl

Stay up to date

IG @de_vorm
LI /company/de-vorm
PIN /devorm_interiorproducts