


# DeVorm


## Mute Beam Indirect

Installation guide USA

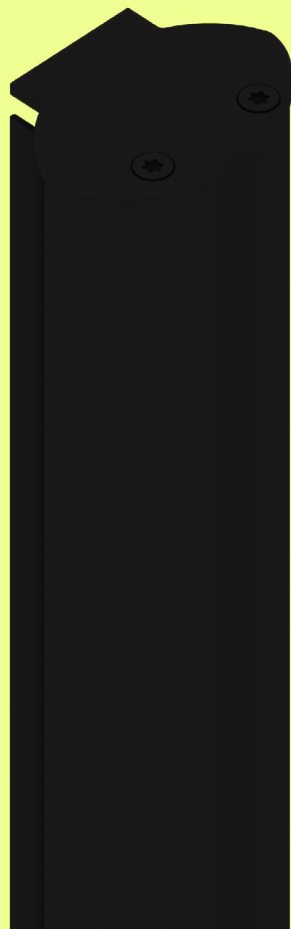

# Introduction

- Follow the instructions for a safe installation.
- Make sure that the power supply has been turned off before installing or cleaning the product.
- Maintain interior lighting with a dry cloth or brush. Do not use alcohol or any other solvents to clean the product. Keep all electrical components dry. Make sure the power is switched off before cleaning this product.



## Design

De Vorm

## About

Mute Beam Indirect creates soft, atmospheric lighting that reflects beautifully off surrounding surfaces. This sleek LED fixture delivers a diffused glow to enhance your commercial spaces with clean, glare-free illumination. Built from recycled aluminium with DALI dimming capability and available in 12 RAL colours, it measures 239 cm to align perfectly with Mute PET Felt Acoustic Panels or work as a standalone lighting solution.



## Specifications

LED module	COB LED strips
Voltage	LED: 24V
Power	10 w/m
Colour temperature	3000K
CRI	>80
Operating temperature	-20° - +50°
LED driver	Not included
IP rating	IP20
Dimmable	yes, depends on driver
Lumen output max	To be confirmed




## Driver requirements

24V DC constant voltage LED driver  
min. 50W

# Parts required

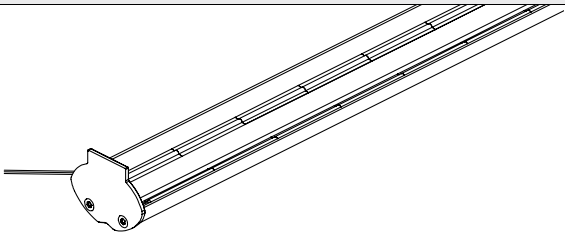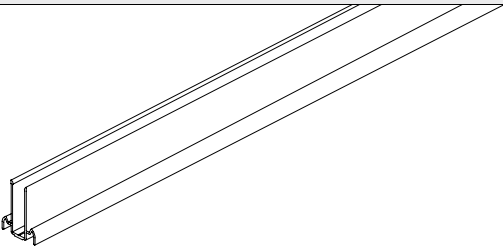LED profile incl cable	Wall profile 1x
	

# Tools required

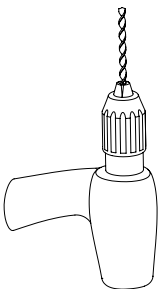
Drill	Flathead screwdriver	Level
		

# Not included


- Screws
- Wall plugs

# Preparation


- 1 Check the wall and determine which fixings you need for your walltype.

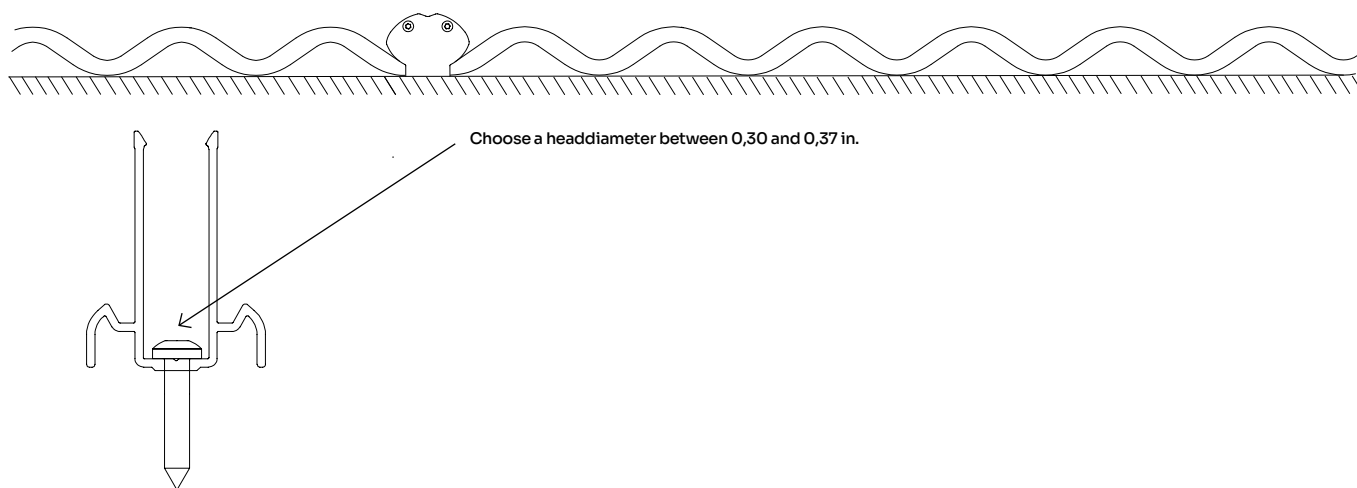


- 2 Drill several holes in the wall profile, using the V-groove in the middle as a guide to stay centred.

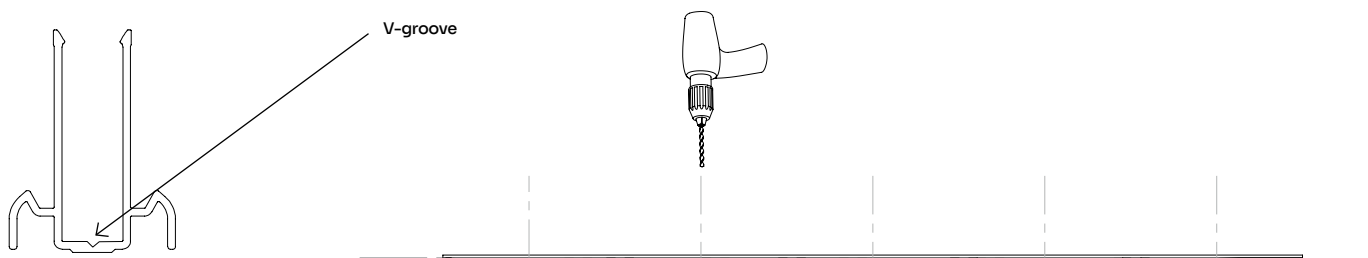

**4** Secure the LED profile to the wall with the top screw. Use a spirit level to position the LED profile so its perfectly level.

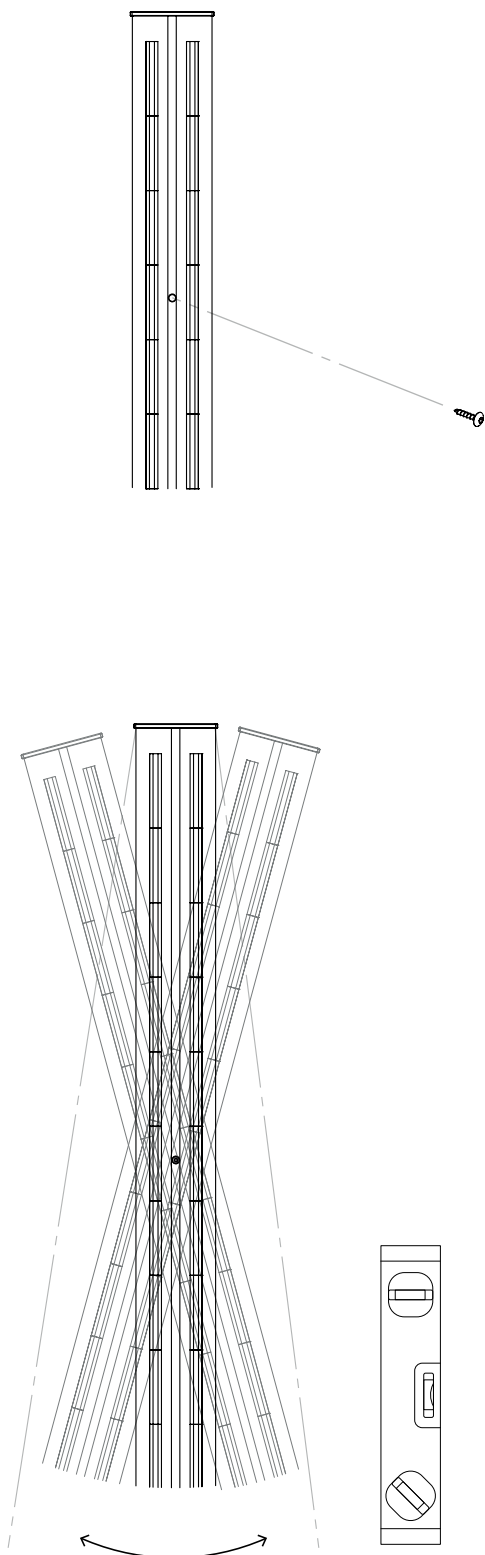


**5** Once the profile is level, fasten the remaining screws.

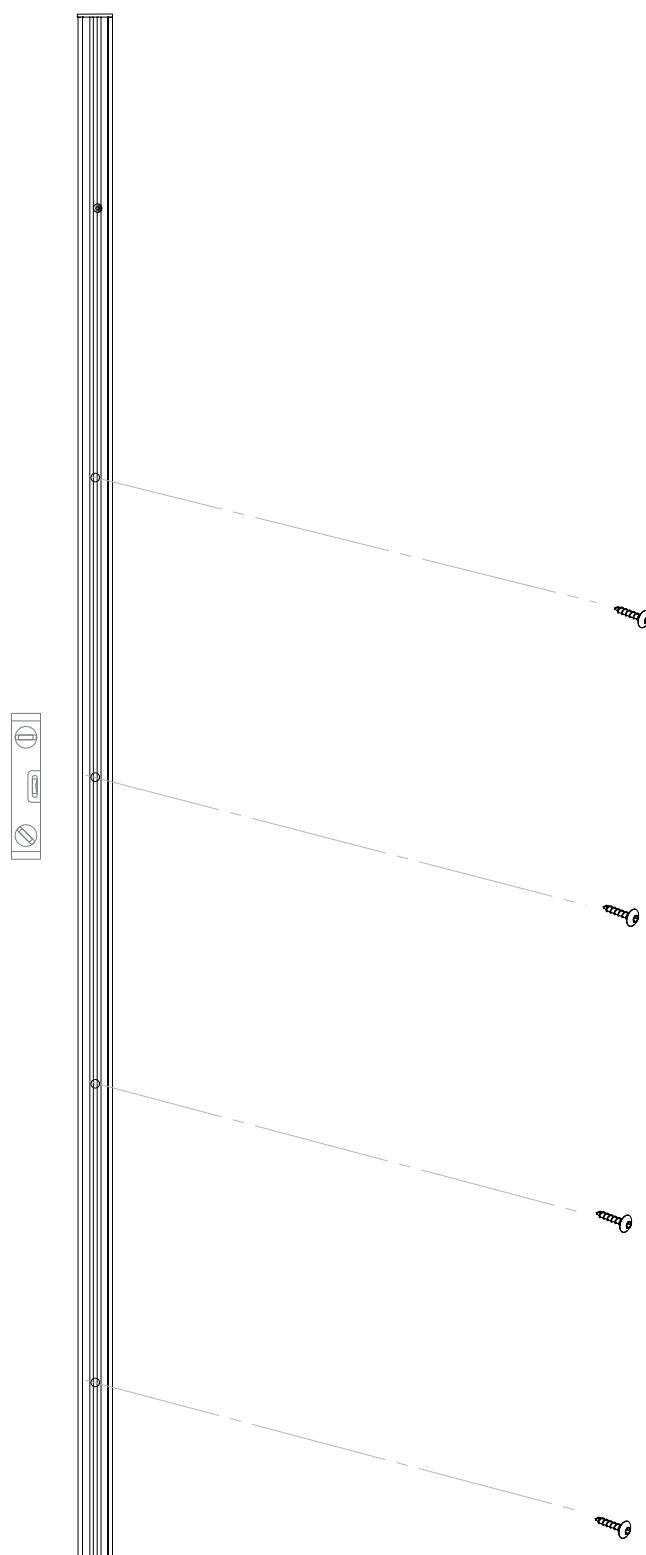


5 Decide if you'd prefer your driver at the top or at the bottom of Mute Beam.

Top

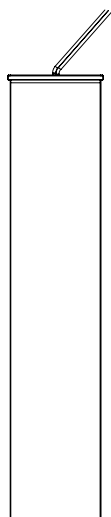

Bottom


- 6** - Place the LED profile on one side inside the wall profile
- Begin installation from one end
  - Press firmly until the LED profile clicks
  - Press along the entire length until it securely clicks into place and is completely fixed in the wall profile.

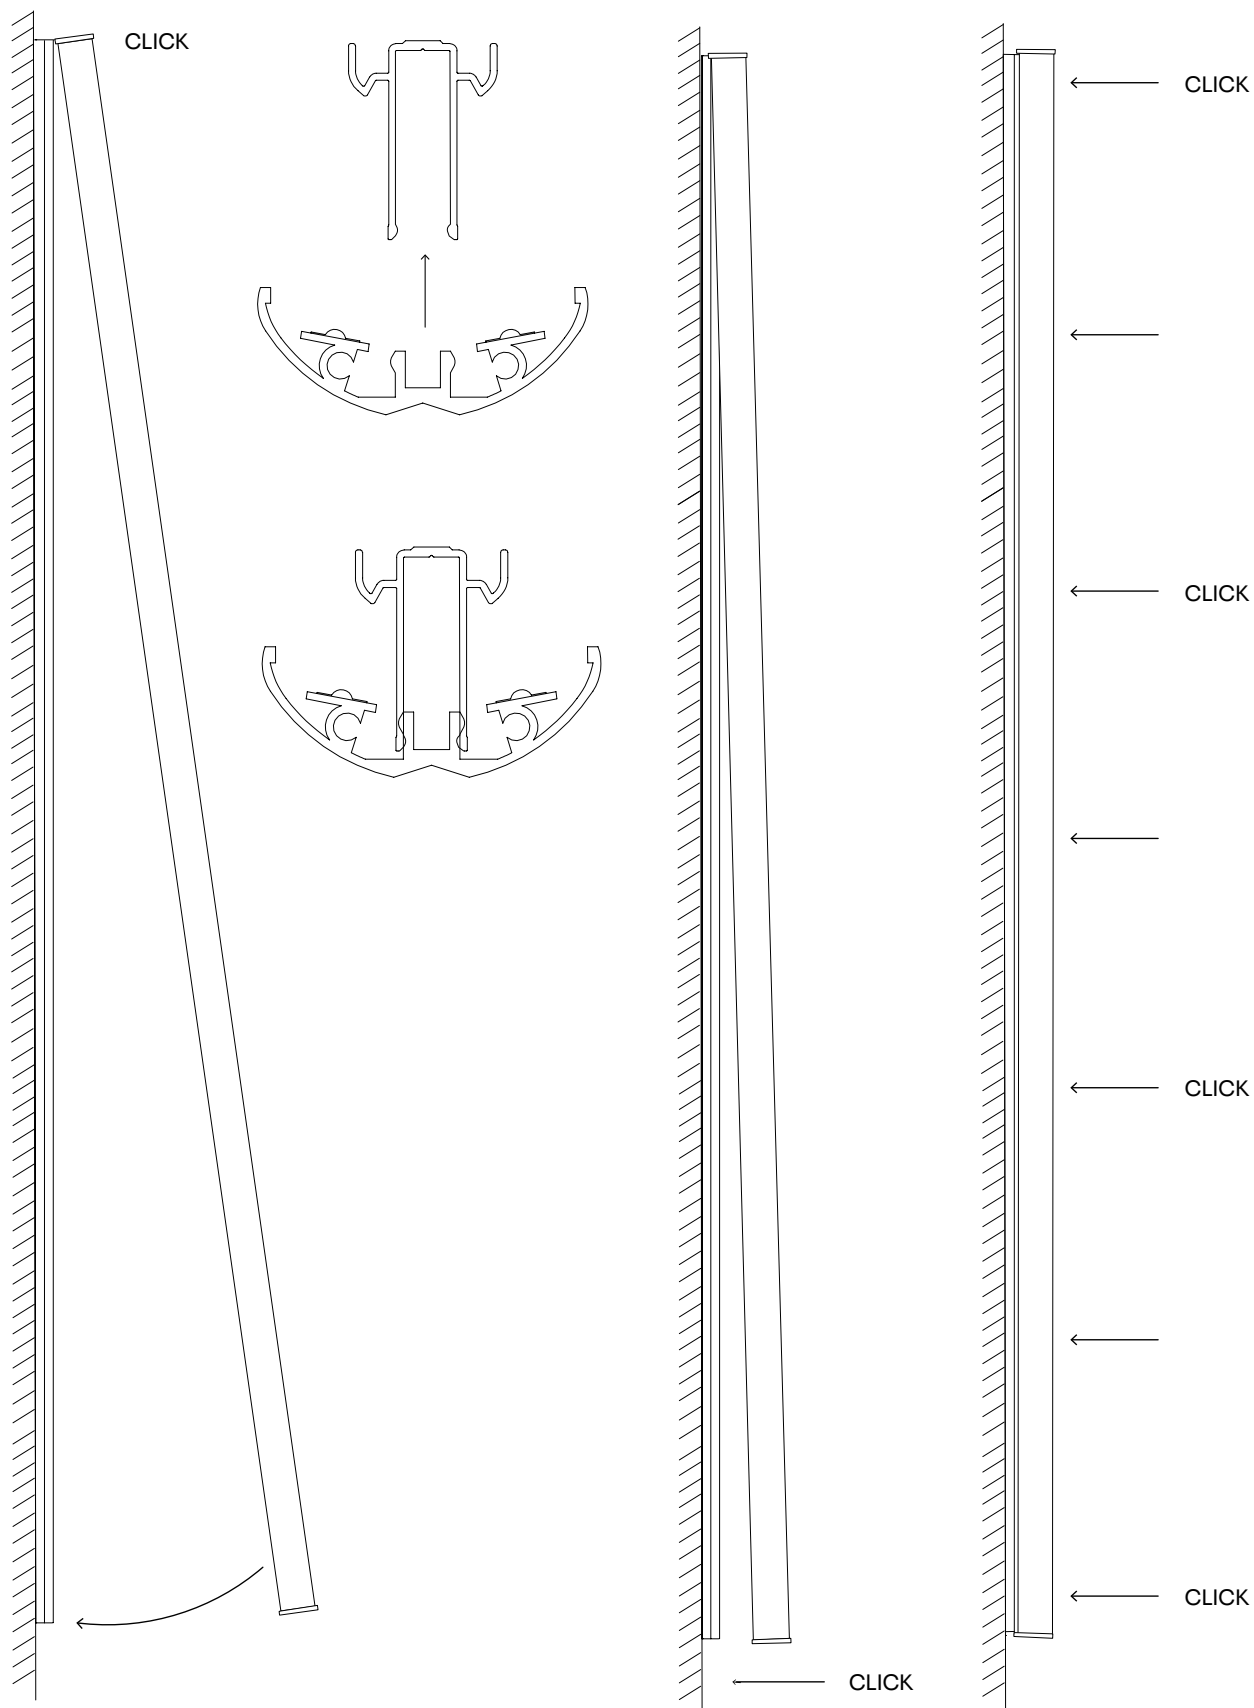

## Connect the driver

- 7**
- Make sure the power is switched off.
  - Check the manual of the driver for specifics
  - Use a flathead screwdriver to loosen the caps
  - Use a 24V DC constant voltage LED driver with a minimum output of 50W (2.1A). A higher-rated driver is also acceptable.


+

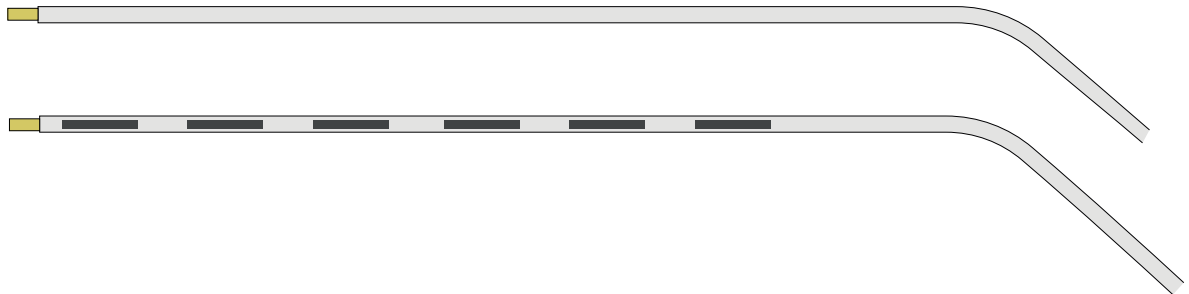

-



- 8** Mount the driver to an invisible spot.

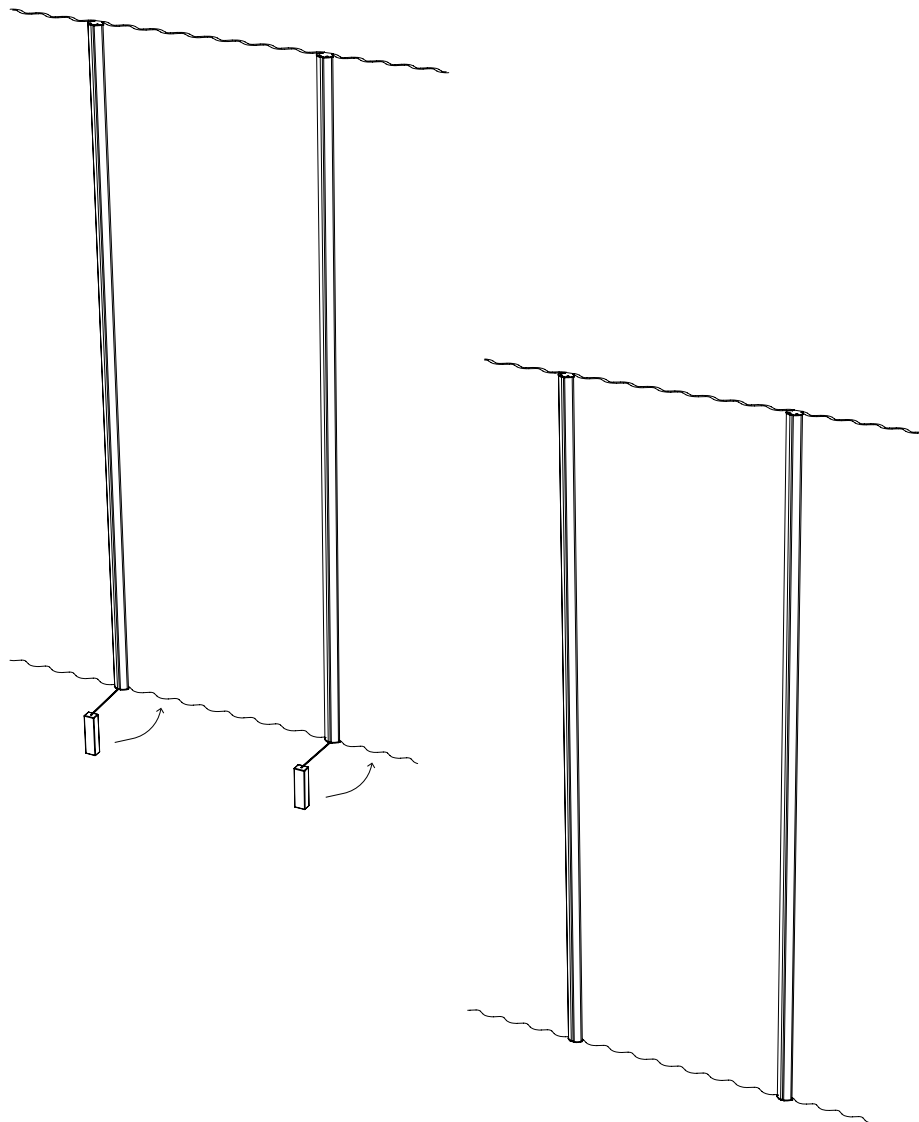



## Find us at

**A** Dijkgraaf 38  
6921 RL Duiven  
The Netherlands

## Get in touch

**T** +31 (0) 26 820 03 60  
**E** [sales@devorm.nl](mailto:sales@devorm.nl)  
**W** [www.devorm.nl](http://www.devorm.nl)

## Stay up to date

**IG** [@de\\_vorm](https://www.instagram.com/de_vorm)  
**LI** [/company/de-vorm](https://www.linkedin.com/company/de-vorm)  
**PIN** [/devorm\\_interiorproducts](https://www.pinterest.com/devorm_interiorproducts)