DeVorm

Mute Flow Floating Lamp

Installation guide

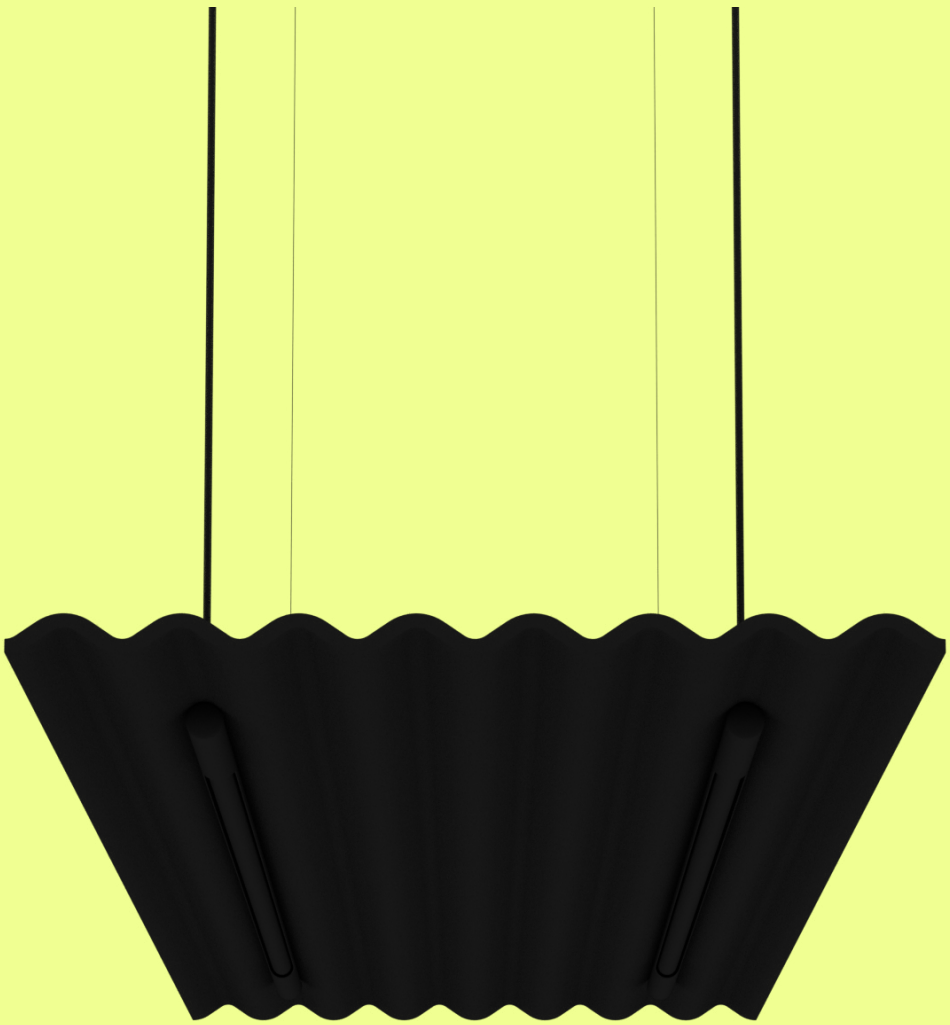

Parts required

Mute Flow Floating Panel		Lighttubes + LED tubes 2x + 2x		Ceiling mount Ø11x14mm 4x	
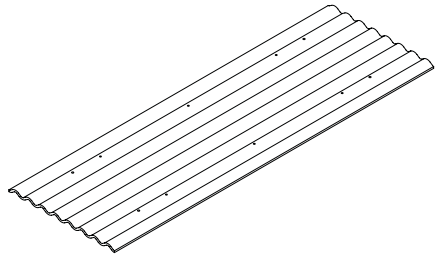		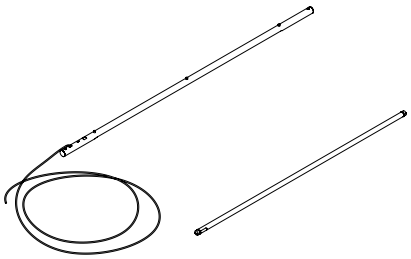			
Adjuster 4x	**Wall plug** Ø6x30mm 4x	**Countersunk washer** M6 6x	**Screws** PZ 4x35mm 4x	**Screws** M6x16 6x	**O-ring** 8x
					

Tools required

Drill Ø6 mm	Flathead screwdriver	Allen key BZK 4
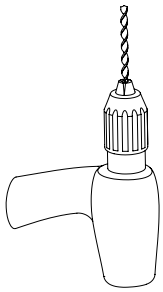		

Installation

❶ Run the wiring through the Mute panel.

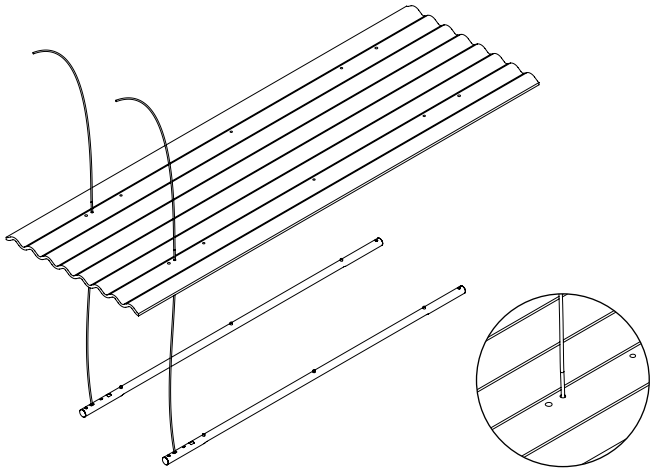

❷ Mount lighttubes on the panel with the screws.

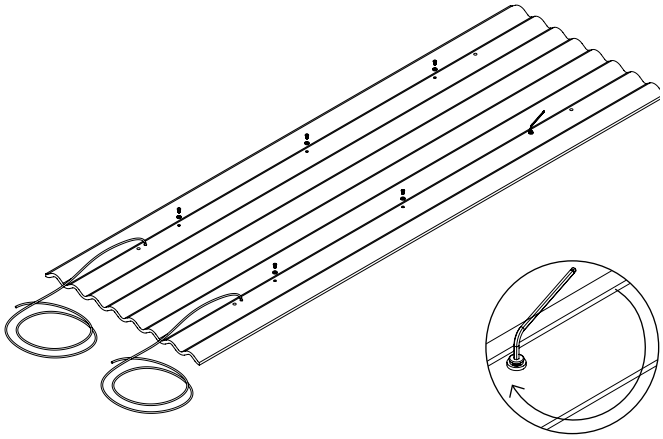

❸ Turn the adjusters in the Mute panel.

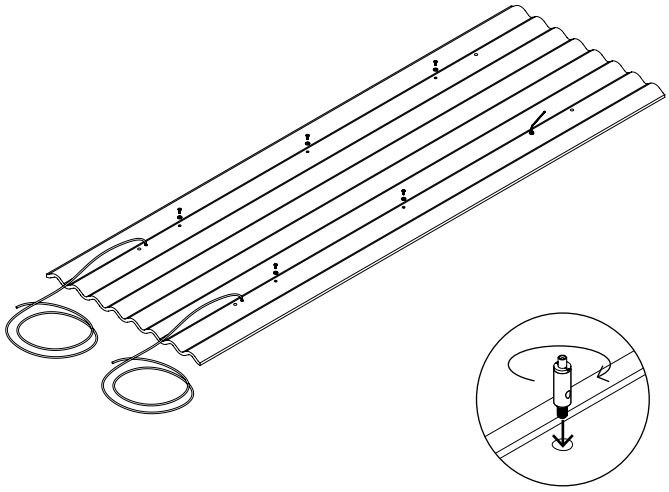

❹ Drill holes in the ceiling.

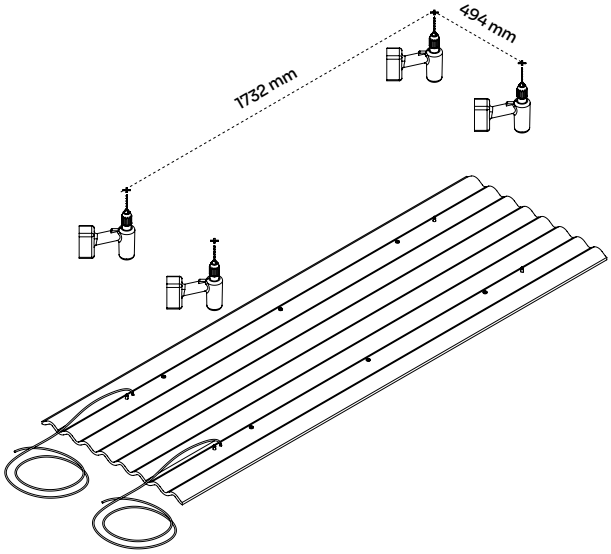

❺ Install the ceiling cap and connect the steel wires to the holes in the ceiling.

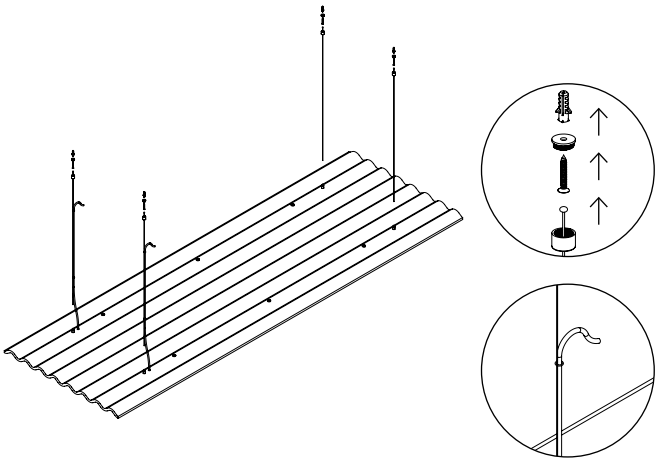

❻ Click the TL LED tubes in the tubes, following the 4 steps on the next page.

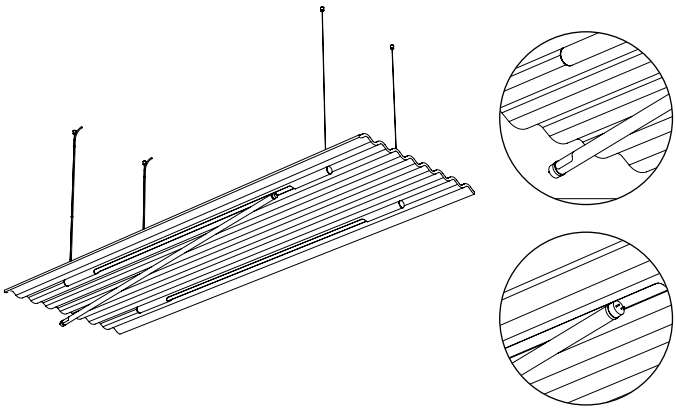

❼ Slide the light diagonally into the LED tube.

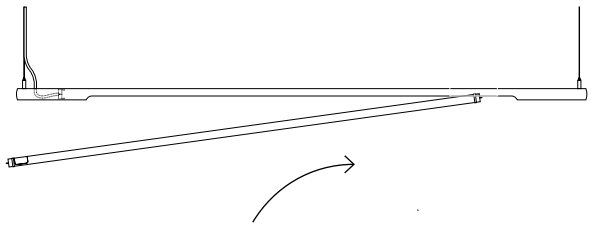

❽ Slide the light horizontally as far as possible into the tube.

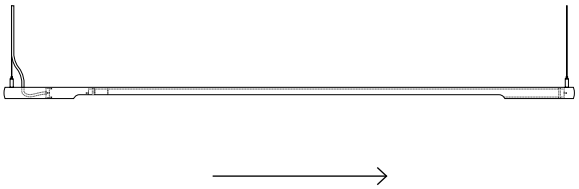

❾ Now slide the light to the left..

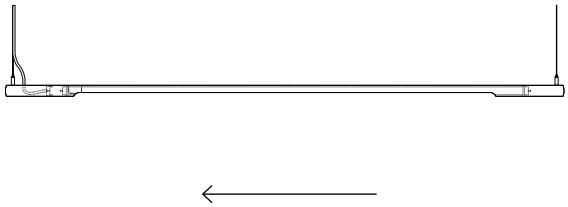

❿ ..until you hear a 'click'

⓫ You are all set!

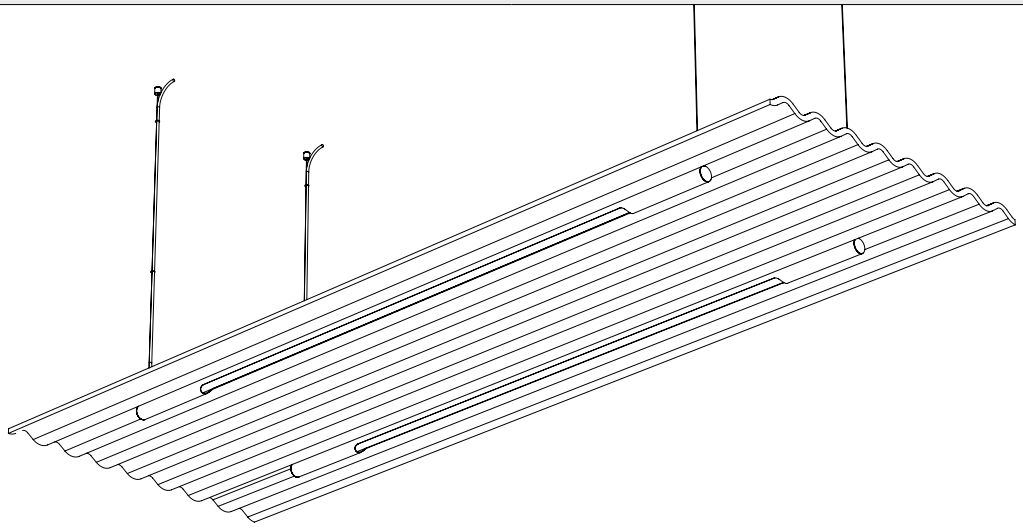

DeVorm

Find us at
A Dijkgraaf 38
6921 RL Duiven
The Netherlands

Get in touch
T +31 (0) 26 820 03 60
E sales@devorm.nl
W www.devorm.nl

Stay up to date
IG @de_vorm
LI /company/de-vorm
PIN /devorm_interiorproducts